


TrueVIS XG-640

Setup Guide

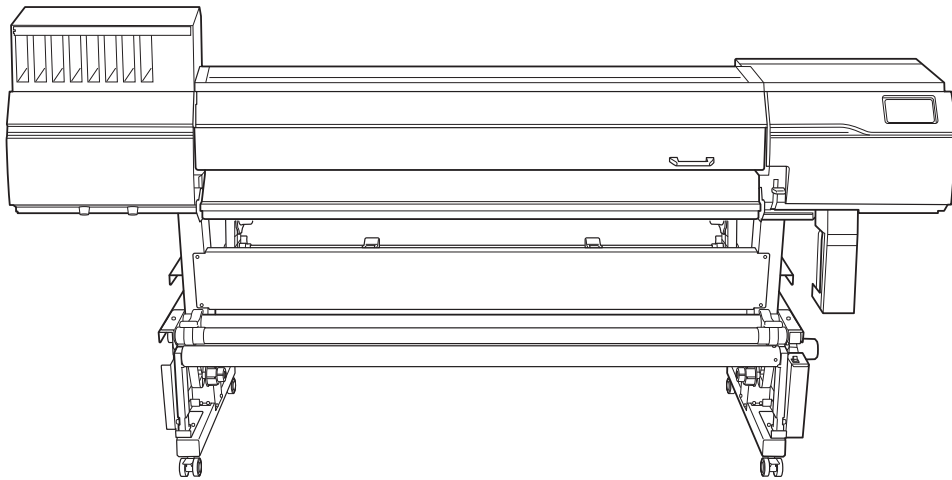

Thank you very much for purchasing this product.

- To ensure correct and safe usage with a full understanding of this product's performance, please be sure to read through this manual completely.
 - Unauthorized copying or transferal, in whole or in part, of this manual is prohibited.
 - The specifications of this product and the contents of this operation manual are subject to change without notice.
 - The operation manual and the product have been prepared and tested as much as possible. If you find any misprints or errors, please inform us.
 - Roland DG Corporation assumes no responsibility for any direct or indirect loss or damage that may occur through use of this product, regardless of any failure to perform on the part of this product.
 - Roland DG Corporation assumes no responsibility for any direct or indirect loss or damage that may occur with respect to any article made using this product.
-

Contents

Introduction	2
1. Checks before Installation	3
About the Documentation for This Machine	3
About Placement and Installation Work	3
Deciding On an Installation Site	4
Temperature and Humidity	5
Installation Space	6
2. Checking the Included Items	7
Installation	9
1. Assembly and Ink Filling	10
Checks before Operations	10
Step 1: Assembling the Stand	11
Step 2: Attaching the Printer Unit and the Stand	14
Step 3: Installing the Media Holders and Media Stays	17
Step 4: Assembling the Media Take-up Unit	21
Step 5: Installing the Drain Bottle	31
Step 6: Removing the Retainers	33
Step 7: Adjusting the Ink Tube	35
Step 8: Affixing the Labels	36
Step 9: Connecting the Cables	37
Step 10: Preparing the Cleaning Liquid	39
Step 11: Initial Settings and Ink Filling	41
2. Installing the Cutting Tool	53
Assembling the Cutting Tool	53
Installing the Cutting Tool	54
3. Network Settings	56
Introduction	57
Setting a Fixed IP Address	58
Directly Connecting to the Computer	60
4. Downloading and Installing Software	65
Downloading Roland DG Connect Hub	65
Installing the Software	66
Configuring the Software RIP Settings	68
Appendix	69
Location of the Power Rating and Serial Number Label	70

Introduction

1. Checks before Installation.....	3
About the Documentation for This Machine.....	3
About Placement and Installation Work	3
Deciding On an Installation Site	4
Temperature and Humidity	5
Installation Space	6
2. Checking the Included Items.....	7

1. Checks before Installation

About the Documentation for This Machine

The following documentation is included with the machine.

Paper Manuals

- **Safety Precautions**

This manual contains points that must be observed.

- **Regular Maintenance Guidelines**

This manual provides URLs where procedures can be found for the machine's daily maintenance as well as for the maintenance that must be performed periodically.

Electronic-format Manuals

- **Setup Guide (this document)**

This manual contains details on how to install the machine and how to configure its initial settings.

- **User's Manual**

This manual contains details such as how to use and maintain the machine as well as an FAQ (a set of frequently asked questions).

You can view and download the electronic-format manuals from the following URL or QR code.

* You can also view and download the paper manuals.

* You can also view this website from a smartphone.



<https://downloadcenter.rolanddg.com/XG-640>

About Placement and Installation Work

The placement and installation of this machine must be performed by suitably qualified workers.

WARNING

Entrust operations such as transportation, unloading, and emplacement to trained professionals.

Suitable equipment and technical skills are required in handling the machine. Tasks that require undue effort may result in a major accident.

Deciding On an Installation Site

Install the machine in a quiet, stable location offering good operating conditions. An unsuitable location can cause accidents, fire, faulty operation, or breakdown.

WARNING

Install the machine in a location that is level, stable, and able to bear the weight of the machine.

The total weight of the machine may reach 200 kg (440.9 lb.) or more. Installation in an unsuitable location may cause a major accident, including tip over, fall, or collapse.

WARNING

Never install this machine outside or in any location where exposure to water or high humidity may occur.

Current leakage may cause electrical shock or fire.

WARNING

Never install the machine close to any flammable object or in a gas-filled location.

Combustion or explosion could occur.

WARNING

Install the machine in a clean, brightly lit location.

Working in a location that is dark or cluttered may lead to an accident, such as becoming caught in the machine as the result of an inadvertent stumble.

WARNING

Position the machine so that the power plug is within immediate reach at all times.

This is to enable quick disconnection of the power plug in the event of an emergency. Install the machine next to an electrical outlet. Also, provide enough empty space to allow immediate access to the electrical outlet.

CAUTION

Ensure adequate ventilation for the work area.

Failing to perform ventilation may result in a health hazard or danger of combustion due to ink fumes.

Unsuitable installation sites

- Locations subject to large fluctuations in temperature or humidity
- Locations subject to shaking or vibration
- Locations where the floor is tilted, not level, or unstable
- Dusty locations
- Locations exposed to direct sunlight
- Locations near air-conditioning or heating equipment
- Locations exposed to water or moving air
- Locations exposed to considerable electrical or magnetic noise or other forms of electromagnetic energy


Temperature and Humidity

Maintain the specified temperature and humidity even when the machine is not in use. Failure to do so may result in malfunction.

- During operation: Temperature: 20 to 32 °C (68 to 89.6 °F), humidity: 35 to 80%RH (no condensation)
- During non-operation: Temperature: 5 to 40 °C (41 to 104 °F), humidity: 20 to 80%RH (no condensation)

Installation Space



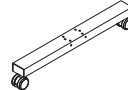
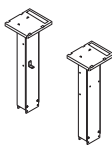




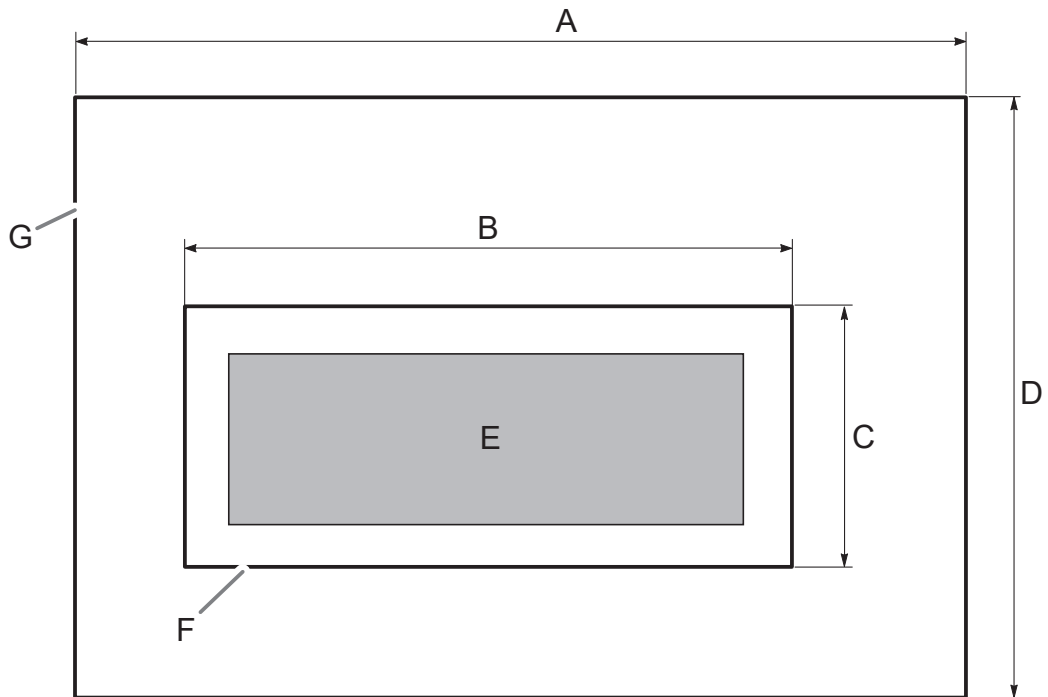

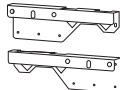
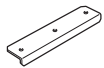
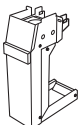




 

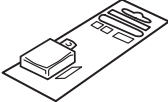







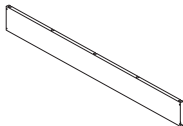


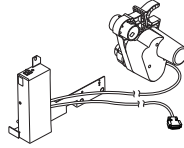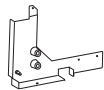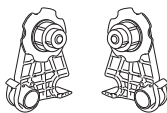

The space shown in the figure is required in order to use this machine.



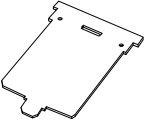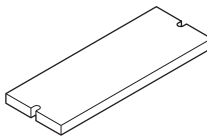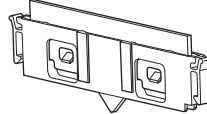

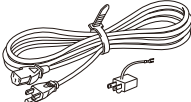
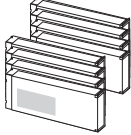
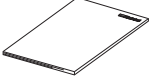
A	4,500 mm (177.2 in.)
B	3,500 mm (137.8 in.)
C	1,000 mm (39.4 in.)
D	2,000 mm (78.7 in.)
E	Unit
F	Unit space
G	Work space

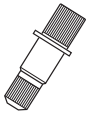2. Checking the Included Items

The following items are included with the machine. Make sure they are all present and accounted for.

 Stand stay (1)	 Shafts (4)	 Casters (2)	 Stand legs (1 each for right and left)
 Dancer roller (1)	 Paper tube (1)	 Control box and motorized media holder (1)	 Left stay (1)
 Media holders (1 each for right and left)	 Left media holder (1)	 Arms (2 each for right and left)	 Shaft clamps (4)
 Drain bottle stand (1)	 Drain bottle (1)	 Media stays (2)	 Cable clamps (7)
 Bolts (64)	 Hexagonal wrench (1)	 Pipe (1)	 Replacement blade for separating knife (1)
 Cleaning liquid (1)	 Droppers (2)	 Replacement wiper cleaner (1)	 Replacement FL sponge (1)
 Replacement wiper (1)	 Cleaning sticks	 Tweezers (1)	 Blade holder (1)
 Blade (1)	 Pin (1)	 Tube joints (8)	 Tubes (4)

2. Checking the Included Items

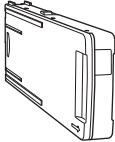 Cartridge case (1)	 Cartridge-slot labels (2)	 Power cord/power plug adapter*1 (1 each)	 Cleaning liquid cartridges (8)
 Manuals			

*1 Included only with 100 V specifications

Installation

1. Assembly and Ink Filling	10
Checks before Operations.....	10
Step 1: Assembling the Stand.....	11
Step 2: Attaching the Printer Unit and the Stand	14
Step 3: Installing the Media Holders and Media Stays	17
Step 4: Assembling the Media Take-up Unit	21
Step 5: Installing the Drain Bottle	31
Step 6: Removing the Retainers	33
Step 7: Adjusting the Ink Tube	35
Step 8: Affixing the Labels.....	36
Step 9: Connecting the Cables	37
Step 10: Preparing the Cleaning Liquid	39
Step 11: Initial Settings and Ink Filling.....	41
2. Installing the Cutting Tool	53
Assembling the Cutting Tool	53
Installing the Cutting Tool	54
3. Network Settings.....	56
Introduction	57
Setting a Fixed IP Address	58
Directly Connecting to the Computer	60
4. Downloading and Installing Software	65
Downloading Roland DG Connect Hub.....	65
Installing the Software	66
Configuring the Software RIP Settings	68

1. Assembly and Ink Filling

Checks before Operations


WARNING

Entrust operations such as transportation, unloading, and emplacement to trained professionals. Suitable equipment and technical skills are required in handling the machine. Tasks that require undue effort may result in a major accident.

CAUTION

Unpacking and installation must be carried out by 6 persons or more. Failure to observe this instruction may cause the machine to fall over, resulting in injury.

Completed Drawing

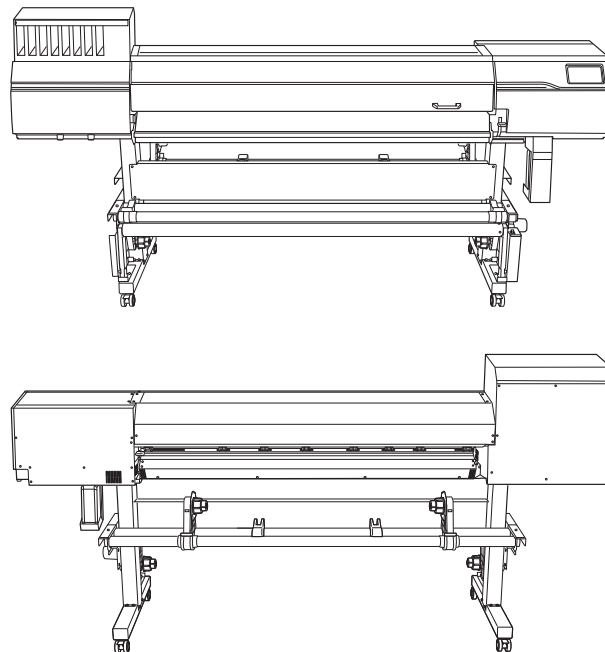

Necessary Tools (Included Items)


- Hexagonal wrench (1)
- Pipe (Use this when the hexagonal wrench is too short to easily tighten bolts) (1)

Step 1: Assembling the Stand

Procedure


1. Place the caster on the stand leg.

Place the stand leg with the tabletop plate (A) facing down, and then place the caster on top of the stand leg. The casters have no particular front and rear orientation.

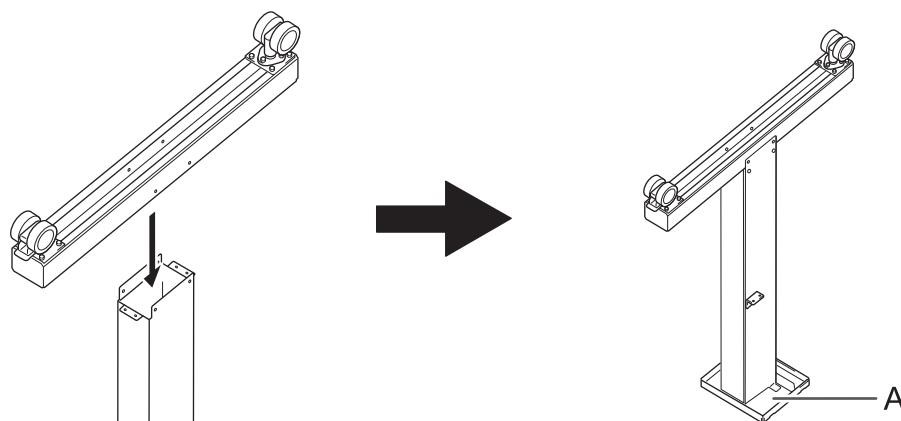


2. Use eight bolts to secure the caster.

(1) Temporarily tighten the bolts in the four lower locations and then in the four locations on the sides.

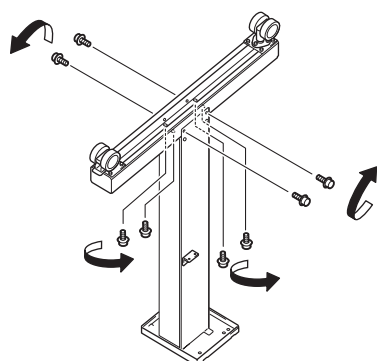


(2) Fully tighten the bolts in the four lower locations.

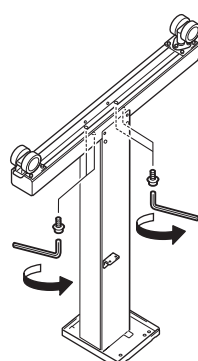

(3) Fully tighten the bolts in the four locations on the sides.


1. Assembly and Ink Filling

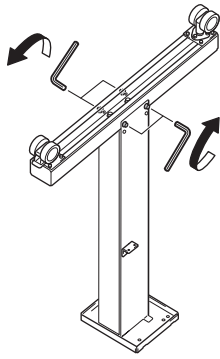

3. Assemble the opposing stand leg by following the same procedure from step 1 to step 2.


4. Position the left and right stand legs parallel to each other and separated by approximately 1,800 mm (70.87 in.).

Position the legs so that the L-shaped brackets face the inside and the side of the tabletop plate with the hole (A) faces down for each leg.

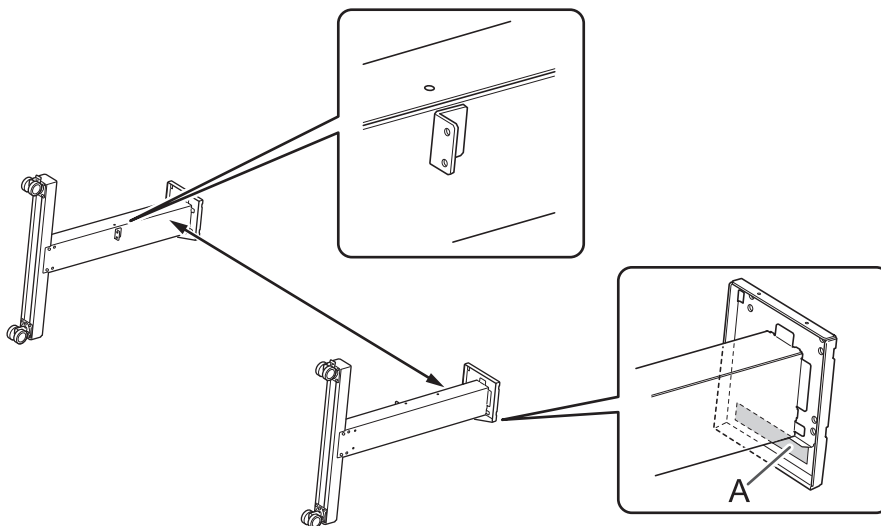

5. Place the stand stay on the stand legs.


Position the stand stay with attachment holes (A) toward the casters.

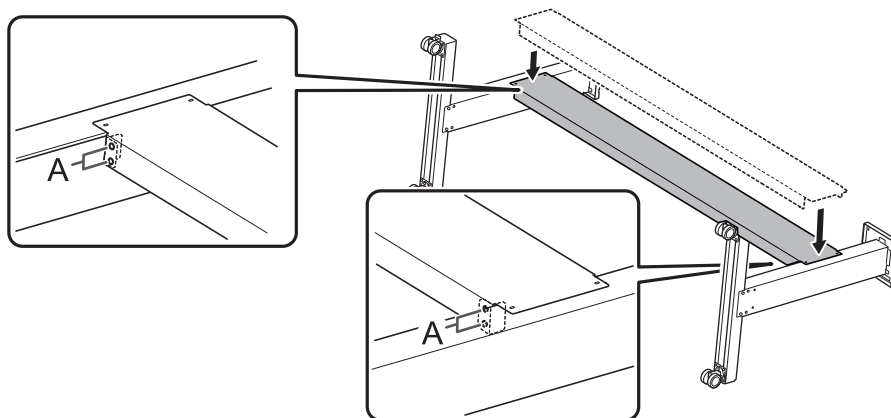

6. Use eight bolts to secure the stand stay.

(1) Temporarily tighten the bolts in the four locations indicated with A followed by the four locations indicated with B.

- (2) Fully tighten the bolts in the four locations indicated with A.
 - (3) Fully tighten the bolts in the four locations indicated with B.
- Tighten the bolts securely. Loose bolts may cause the stand to wobble.

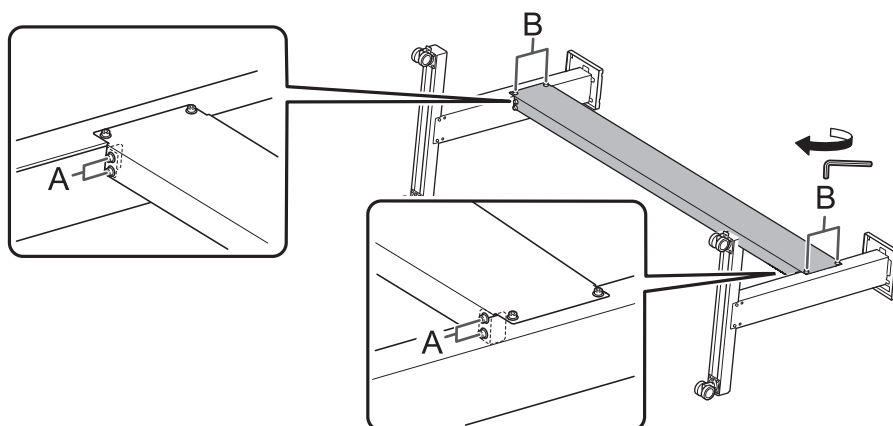

7. Set the stand upright.

IMPORTANT

Be sure to perform this operation with two workers, each one holding one stand leg. If only one worker performs this operation, the stand stay may bend.


Step 2: Attaching the Printer Unit and the Stand

Procedure


1. With six or more workers, lift up the printer unit.

CAUTION

Unpacking and installation must be carried out by 6 persons or more.
Failure to observe this instruction may cause the machine to fall over, resulting in injury.

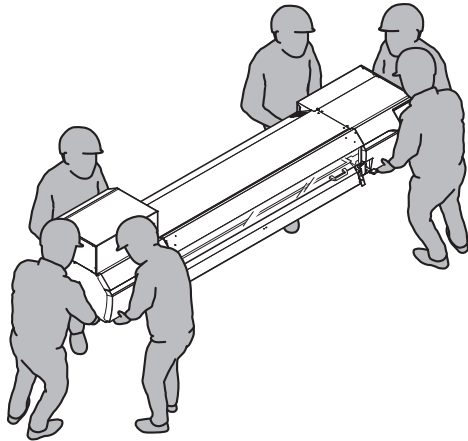

2. Move the stand under the printer unit.
The stand must be moved by a worker other than those indicated in step 1.
3. Fit the protrusions on the stand into the slits on the printer.

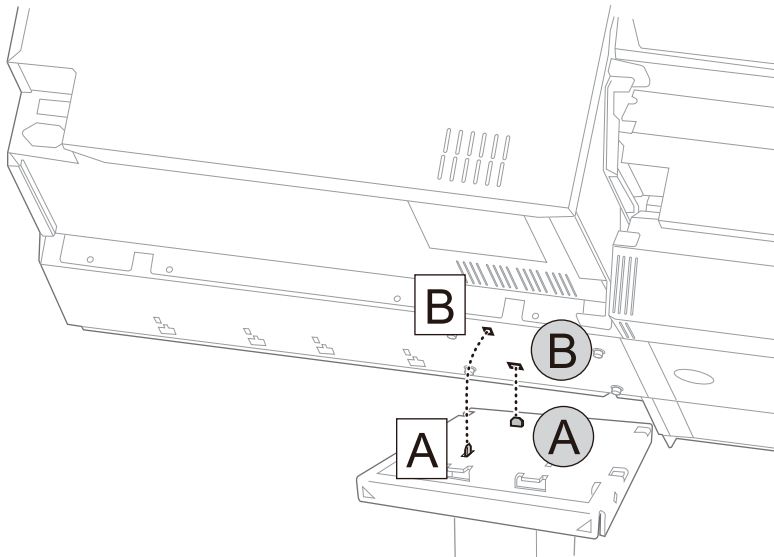


There are two protrusions and slits on the left side and on the right side. Fit all the protrusions into all the slits.

To fit the protrusions into the slits correctly, align the front, rear, left, and right sides of the stand and the printer as shown below.


- (1) Align the left and right sides.

Align the edge of the bracket (①) on the printer unit with the edge of the triangle mark (②) on the stand as seen from the rear of the printer.

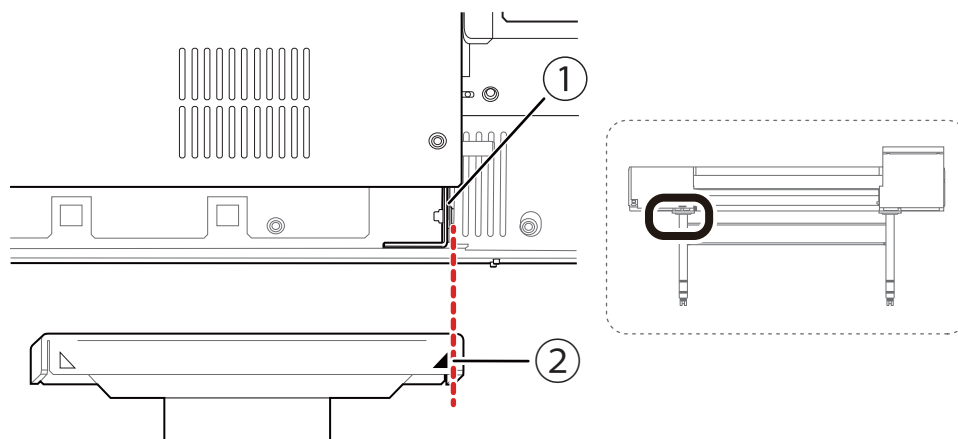

(2) Align the front and rear sides.

Align the edge of the bottom of the printer unit (②) with the center line of the rhombus mark (①) on the inside of the stand.

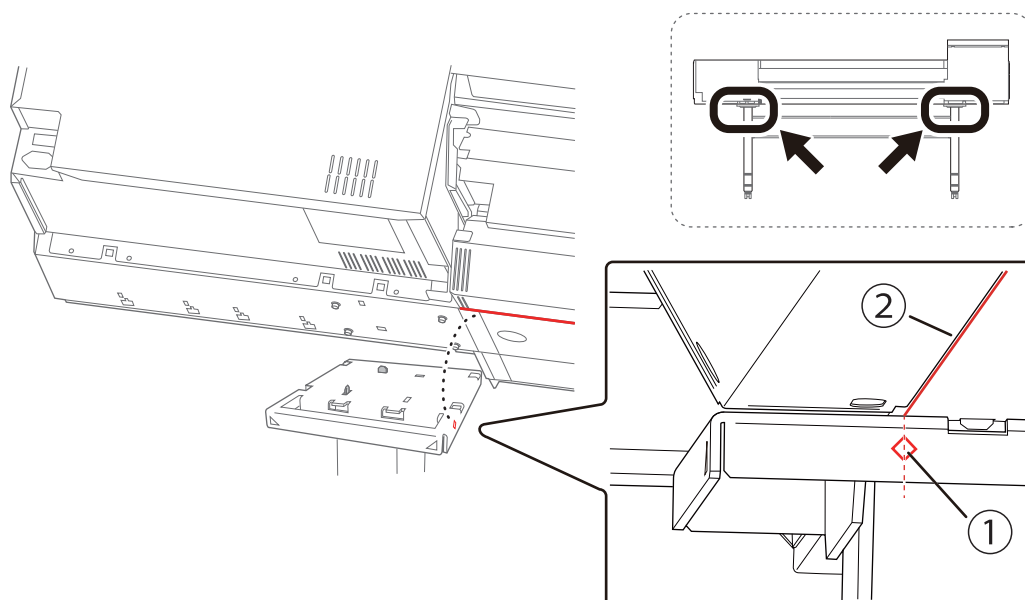


IMPORTANT

Be sure to have workers support the printer unit until the temporary tightening of bolts in step 5. This unit may fall over if it is released before being fixed in place with bolts in step 5.

4. Make sure there are no gaps between the tabletop plates of the left and right stands and the printer unit.


MEMO

The printer's center of gravity is at its back, so there may be a gap at the front of the printer.

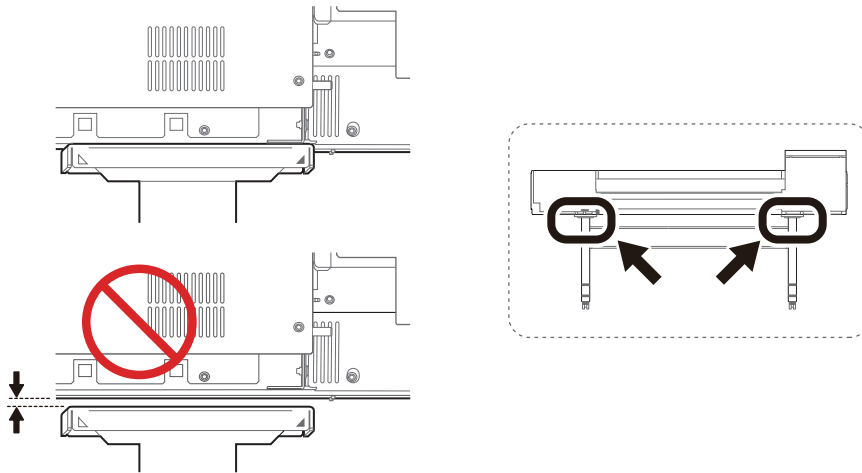

5. Secure the printer unit on the stand.

- (1) Lift the back of the printer up slightly to make it level.
- (2) Temporarily tighten the eight bolts.
- (3) Fully tighten the eight bolts.

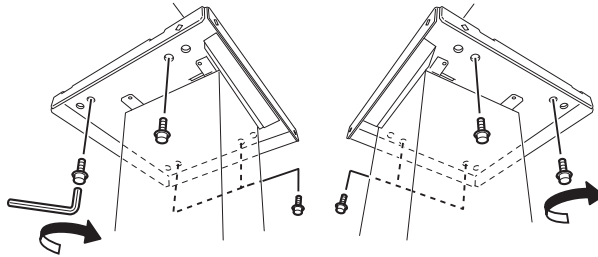


Step 3: Installing the Media Holders and Media Stays

1. Attach the arms.


Procedure

1. Temporarily tighten the bolts on the left stand as seen from the rear of the printer.

Tighten the bolts in the holes on the side of the stand until you can see approximately 5 mm (0.2 in.) of their threads (A).

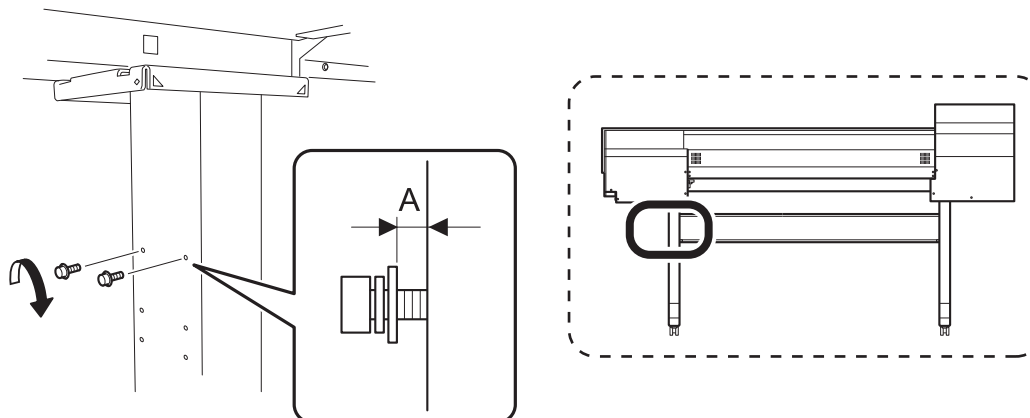


2. Attach the left arm to the temporarily tightened bolts, and then slide this arm to the right.

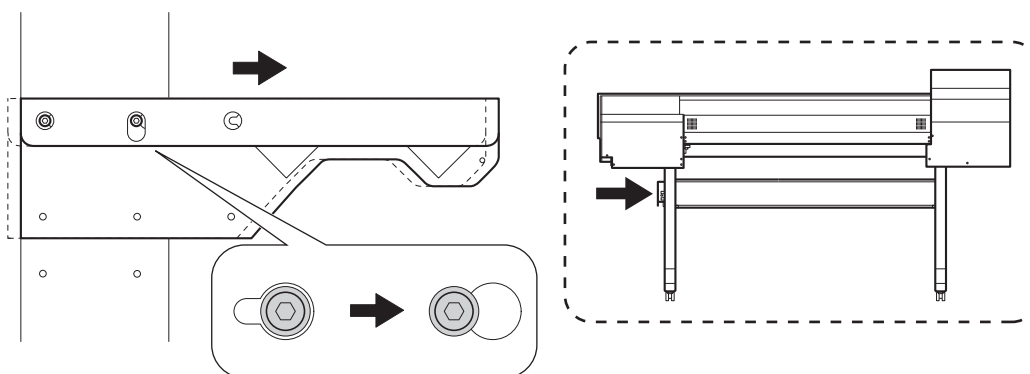

MEMO

Each arm can only be used on the left (A) or right (B) side. Attach them on the correct sides.

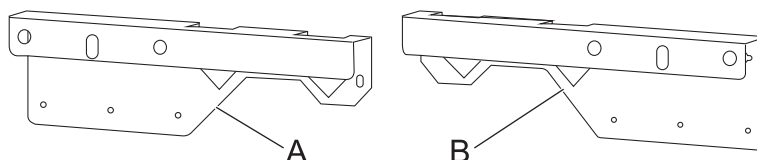


3. By hand, tighten the temporarily tightened bolts until there is no gap between the left arm and the stand.



MEMO

Hold the pieces together so there is no gap between arm A (left) and stand when tightening the bolts.


4. Make sure the protrusions on the stand leg (A) are in the center of the holes on the arm (B). Move the arm to the left and right until these protrusions are centered.

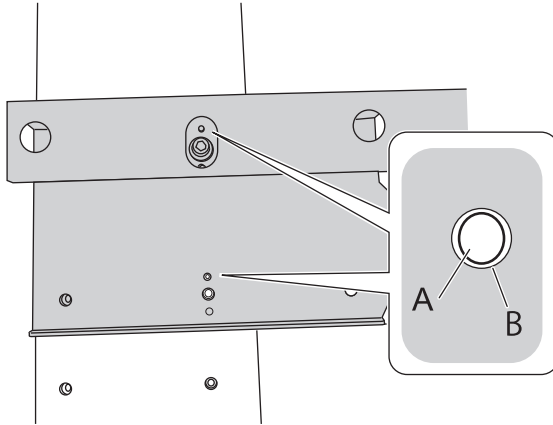

5. Temporarily tighten the bolts at the bottom of the left arm.

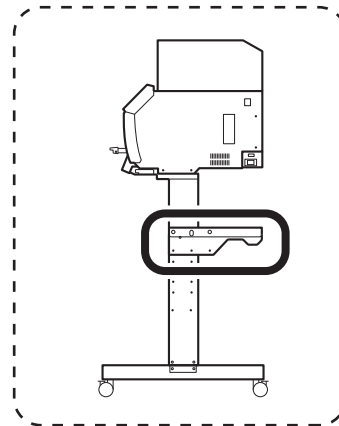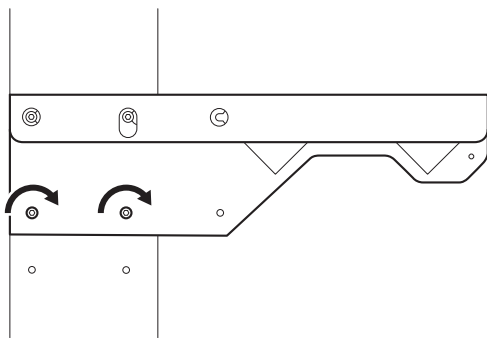

6. Use a hexagonal wrench to fully tighten the upper bolts (①) followed by the lower bolts (②).

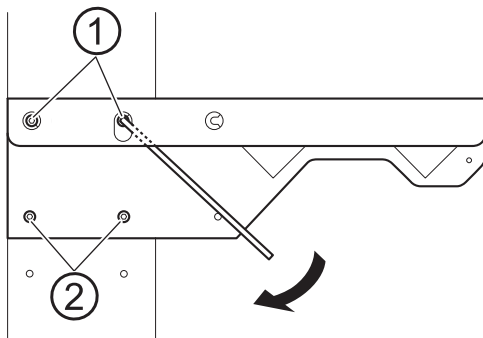


7. In the same manner, attach the right arm to the right side as seen from the rear of the printer.


2. Attach the media holders.

Procedure

1. Place the two shafts on the arms.

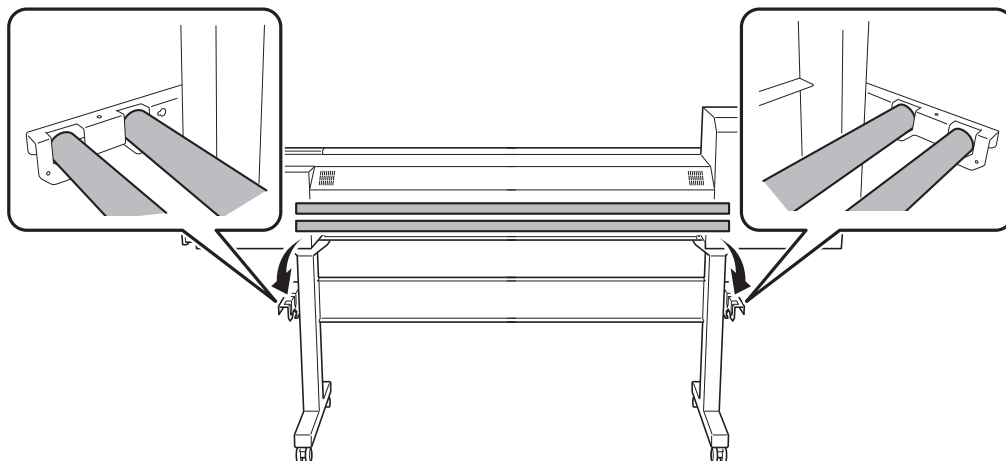


2. Pass the rear shaft through the two media stays.

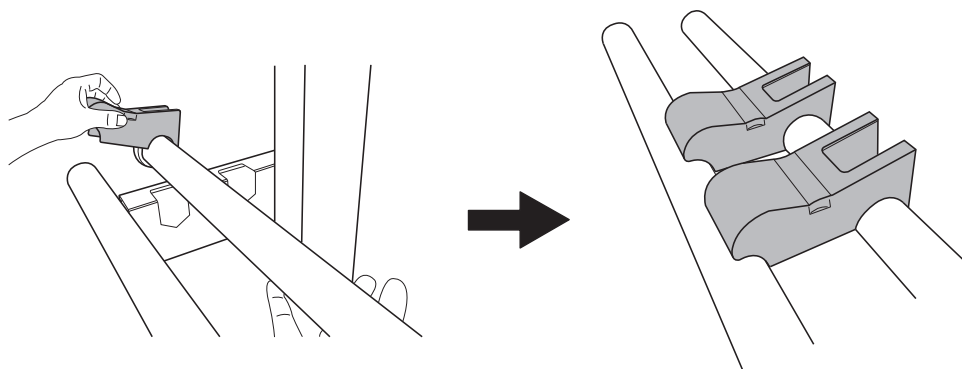


3. Attach the left media holder.

- (1) Pass the front shaft through the left media holder.
- (2) Catch the left media holder on the rear shaft.

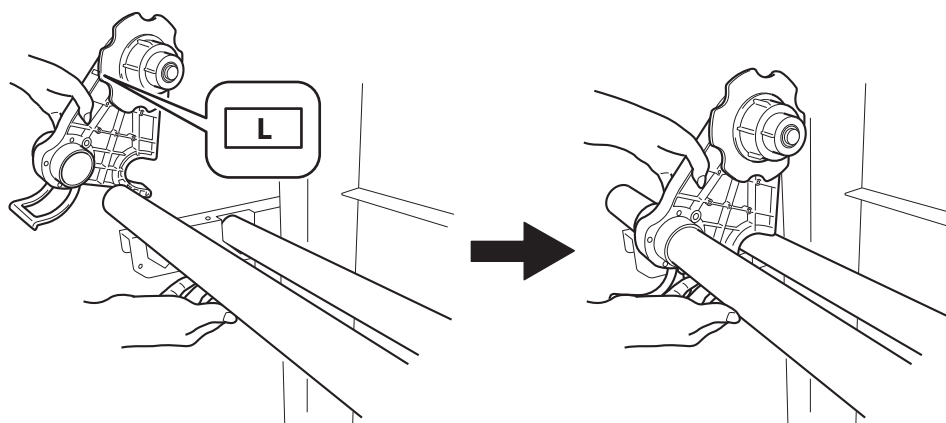

4. Attach the right media holder in the same manner.
Use the media holder with an R label.


5. Raise the levers (A) to secure the left and right media holders.
Position the media holders approximately 100 mm (3.94 in.) from the edges.

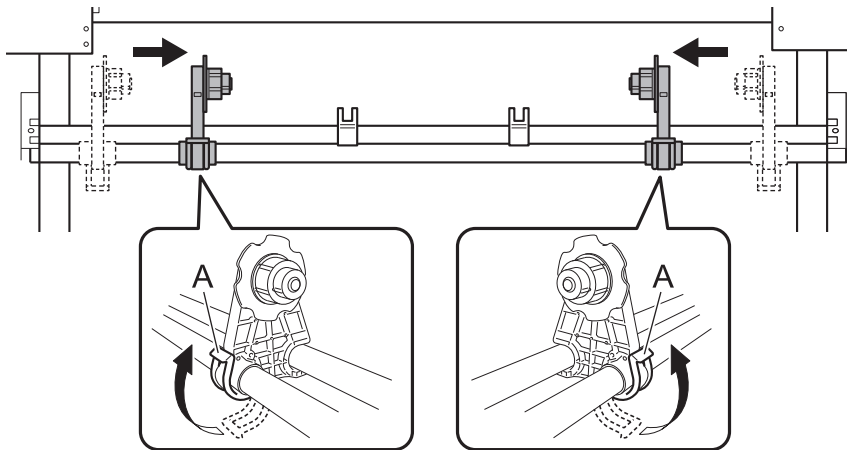

6. Attach the shaft clamps, securing the shafts with two bolts.

MEMO

Ensure the media holders do not get caught in the shaft clamps.

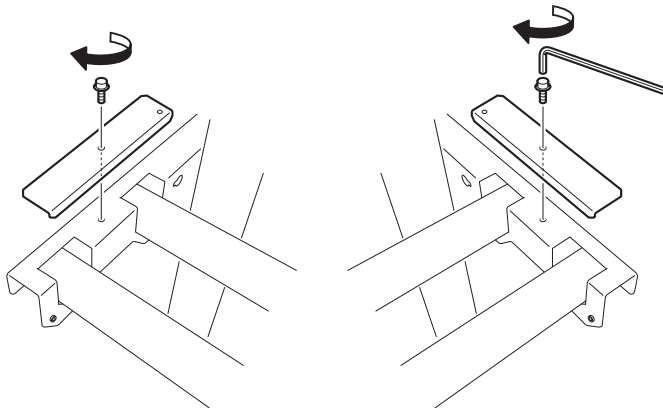


Step 4: Assembling the Media Take-up Unit

1. Attach the arms.


Procedure

1. Temporarily tighten the bolts on the left stand as seen from the front of the printer.

Tighten the bolts in the holes on the side of the stand until you can see approximately 5 mm (0.2 in.) of their threads (A).

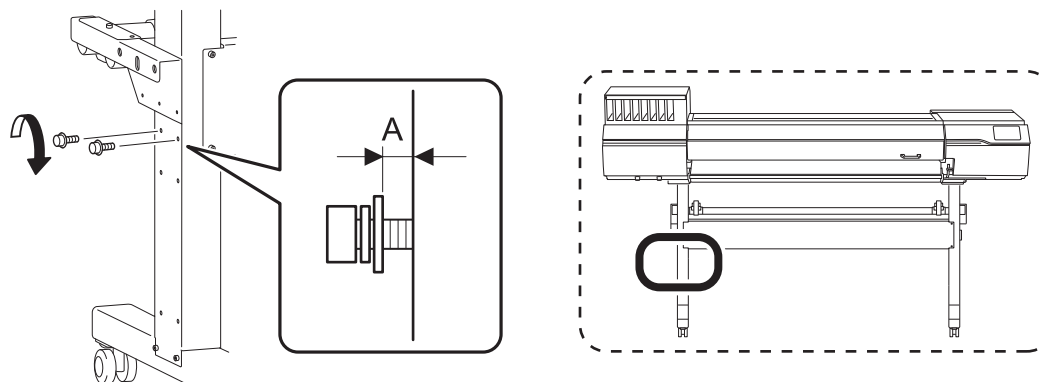


2. Attach the left arm to the temporarily tightened bolts, and then slide this arm to the right.

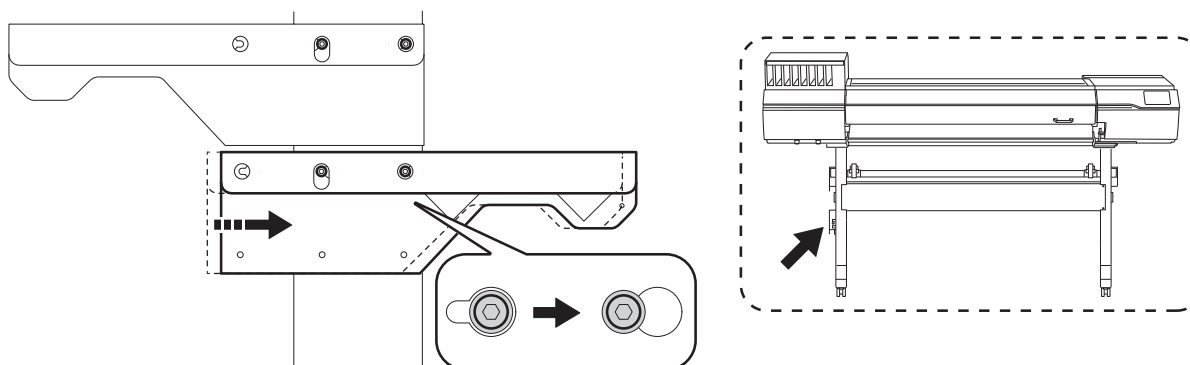

MEMO

There are two different arm parts: left (A) and right (B). Attach them on the correct sides.

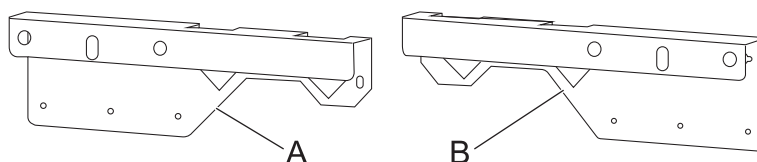

3. By hand, tighten the temporarily tightened bolts until there is no gap between the left arm and the stand.


IMPORTANT

Hold the pieces together so there is no gap between the left arm and stand when tightening the bolts.


4. Make sure the protrusions on the stand leg (A) are in the center of the holes on the arm (B).

1. Assembly and Ink Filling


Move the arm to the left and right until these protrusions are centered.

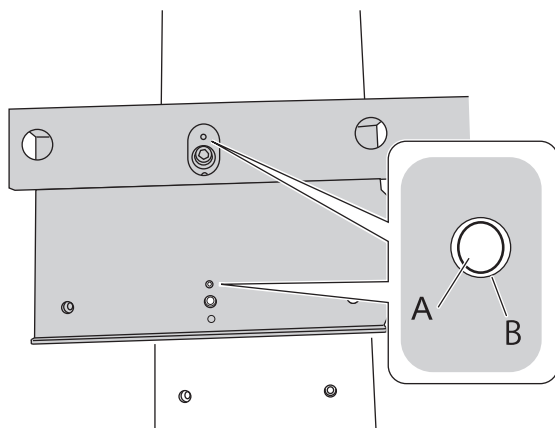

5. Temporarily tighten the bolts at the bottom of the left arm.

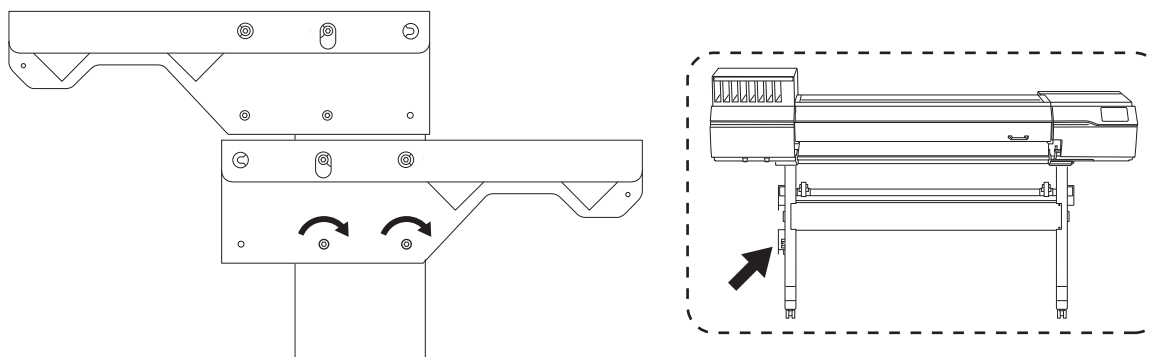

6. Use a hexagonal wrench to fully tighten the upper bolts ① followed by the lower bolts ②.

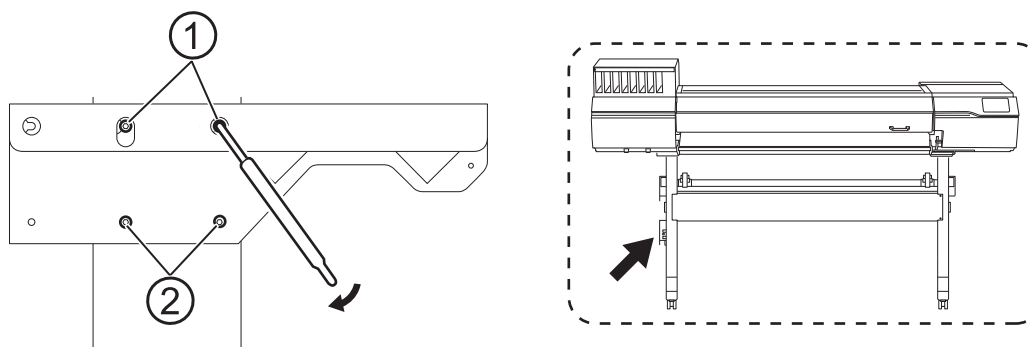

7. In the same manner, attach the right arm to the right side as seen from the front of the printer.

2. Attach the control box and the left stay.


Procedure

1. Place the control box (A) on the right stand leg.


Assemble the motorized media holder (B) by passing it through the rear of the right stand leg. Place the holder outside the machine.

IMPORTANT


The control box (A) and the motorized media holder (B) are connected with a wire. Do not subject this wire to excessive force.

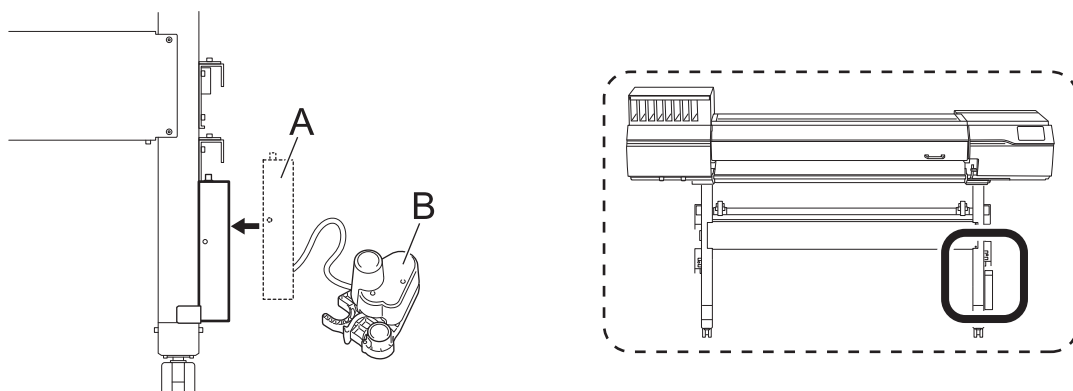


2. Temporarily tighten the four bolts shown in the figure.

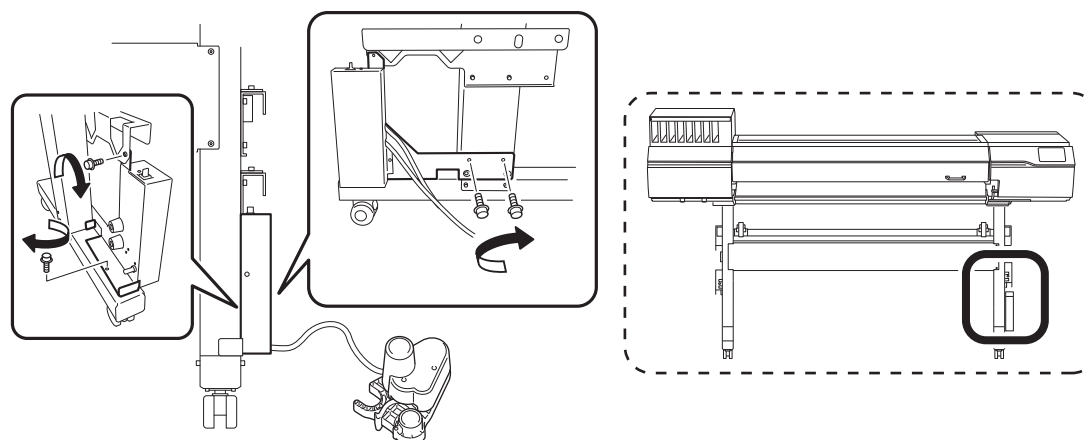

3. By hand, tighten the temporarily tightened bolts until there is no gap between the left arm and the stand.
Hold the pieces together so there is no gap between the outside surface of the stand leg and the control box stay when tightening the bolts.
4. Make sure the protrusion on the stand leg (A) is in the center of the hole on the control box stay (B).
Move the control box until this protrusion is centered.

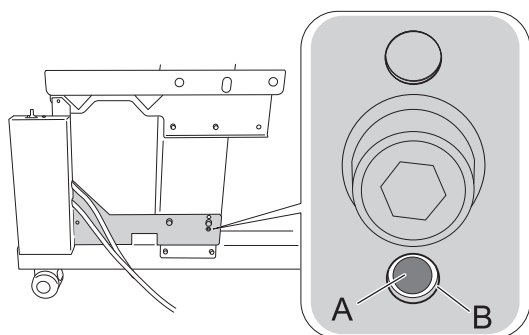

5. Fully tighten the bolts in the order of ①, ②, ③.

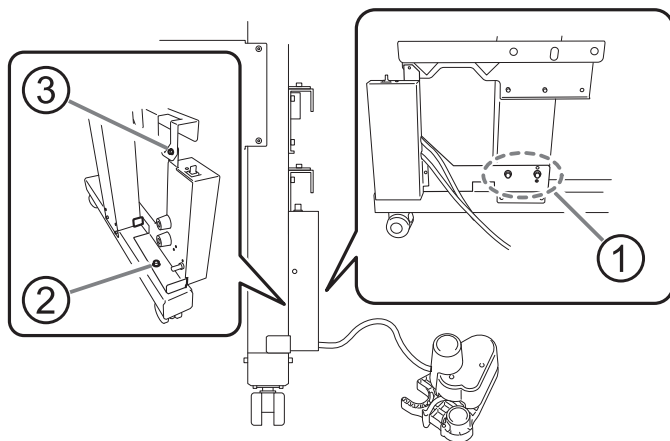


6. Place the left stay on the left stand leg in the same manner as the control box.

7. Temporarily tighten the four bolts on the left stay.

IMPORTANT

After temporarily tightening the bolts, position the stay in the same manner as the control box.


8. Fully tighten the four bolts in the same order as the control box.

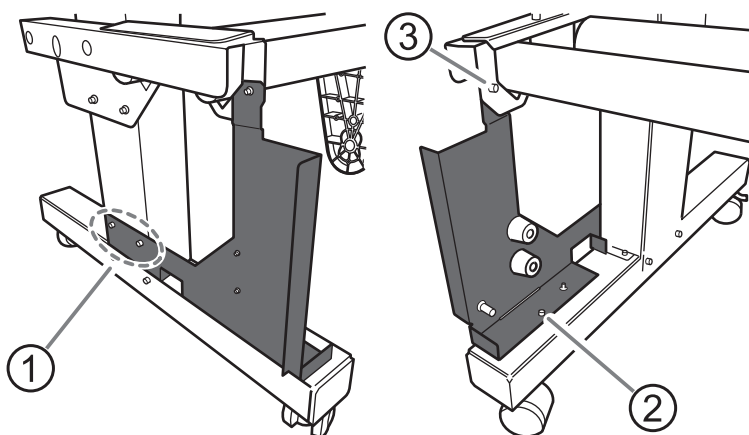


3. Attach the media holders.

Procedure


1. Position the motorized media holder as shown in the figure.
Be sure to pass this holder behind the stand.

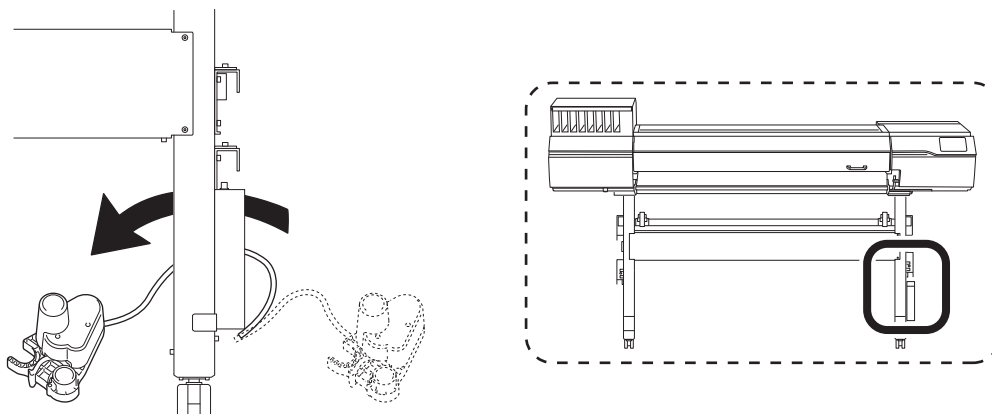


2. Place the two shafts on the arms.

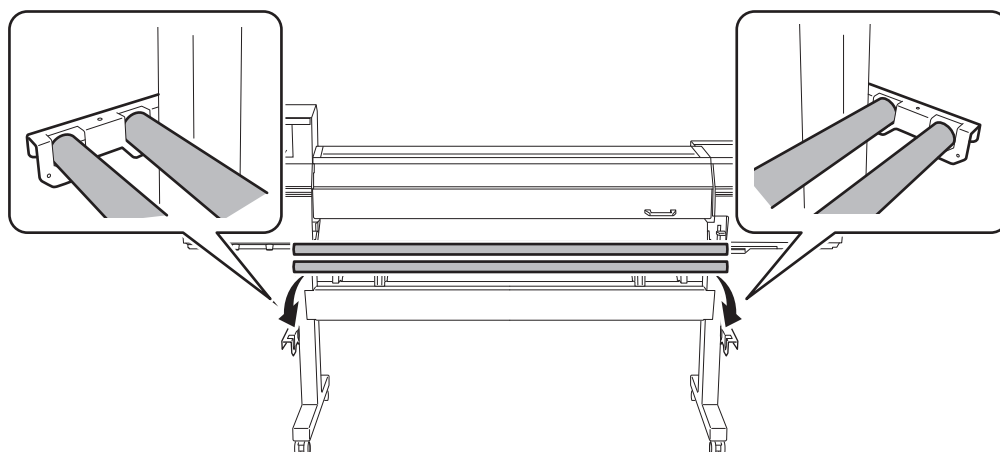


3. Pass the shaft through the motorized media holder.
 - (1) Pass the front shaft through the motorized media holder.
 - (2) Catch the motorized media holder on the rear shaft.

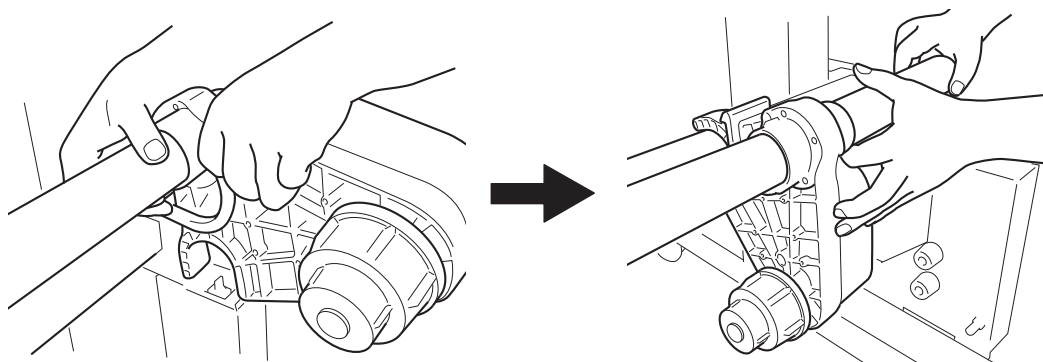

4. In the same manner, pass the shaft through the left media holder on the left side of the printer as seen from its front.

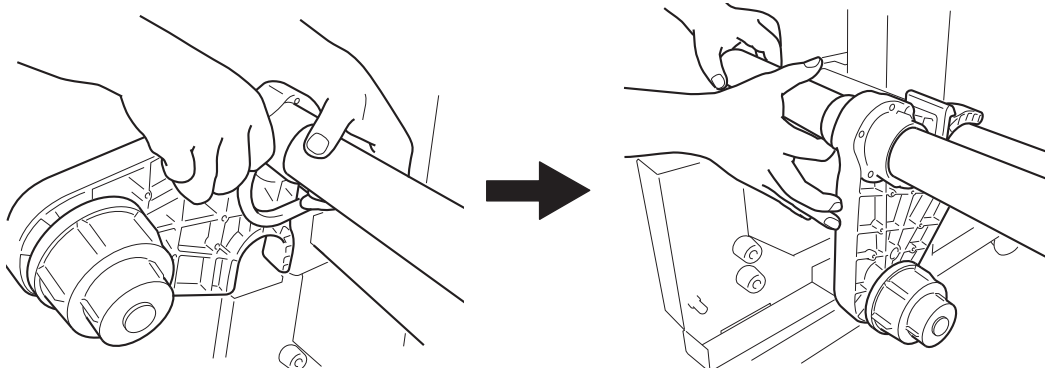


5. Lower the levers (A) to secure the left and right media holders. Leave approximately 100 mm (3.94 in.) of space from the edges.

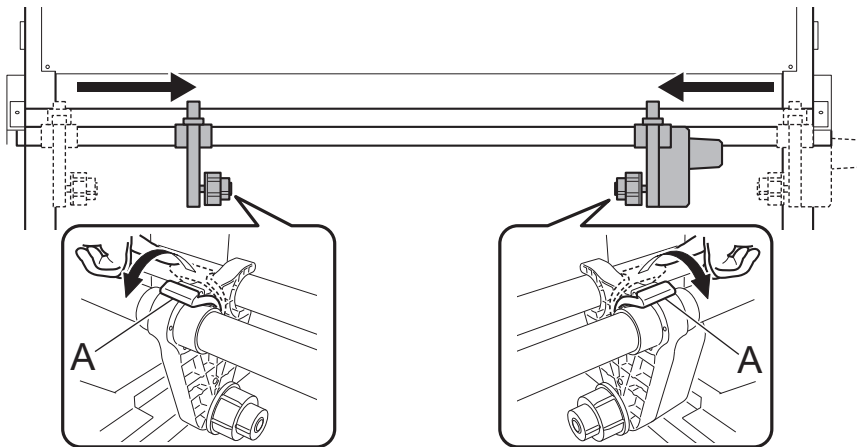

6. Attach the shaft clamps, securing the shafts with two bolts.

IMPORTANT

Ensure the media holders do not get caught in the shaft clamps.

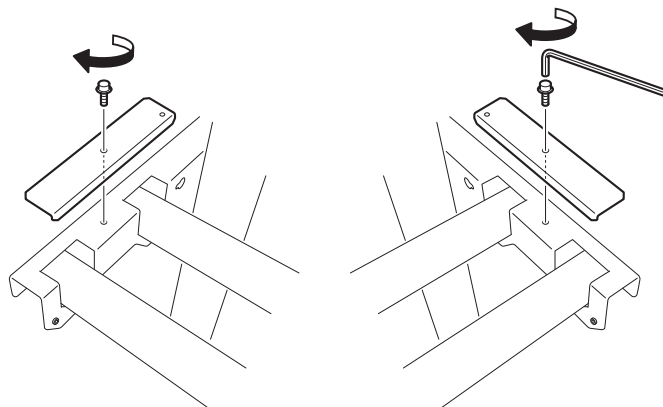


4. Attach the cable clamps and the cable.

Procedure


1. Attach seven cable clamps to the positions shown in the figure.

The clamps on the side and back of the machine are used for the power cord and the Ethernet cable and will be used later.

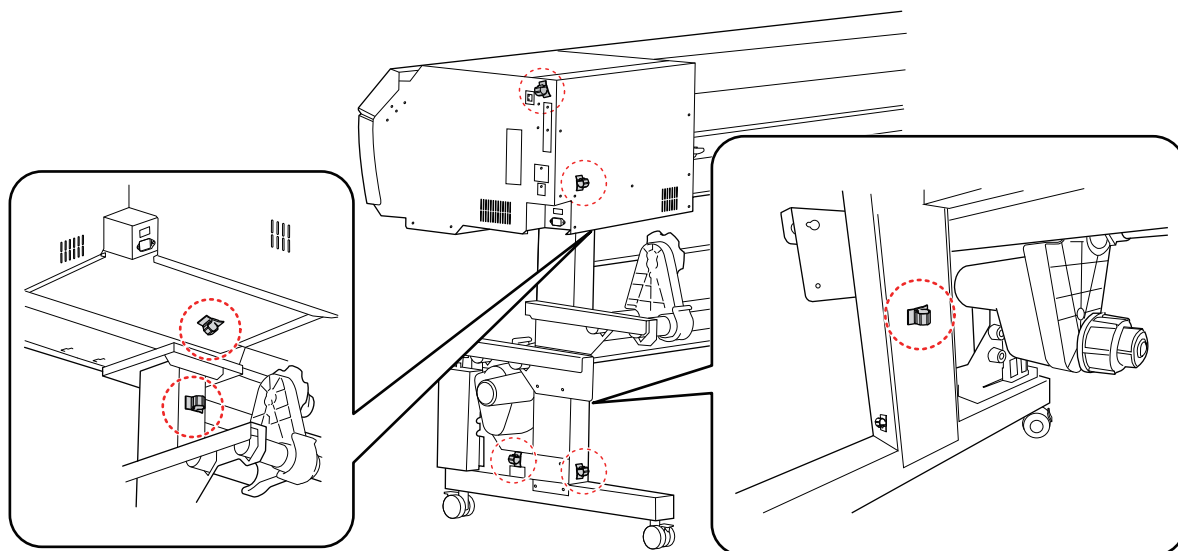


2. Connect the control box cable to the [TAKE UP] connector on the unit.

- Pass the cable along the inside of the arm.
- Use a number 1 Phillips screwdriver to tighten the connector screws.

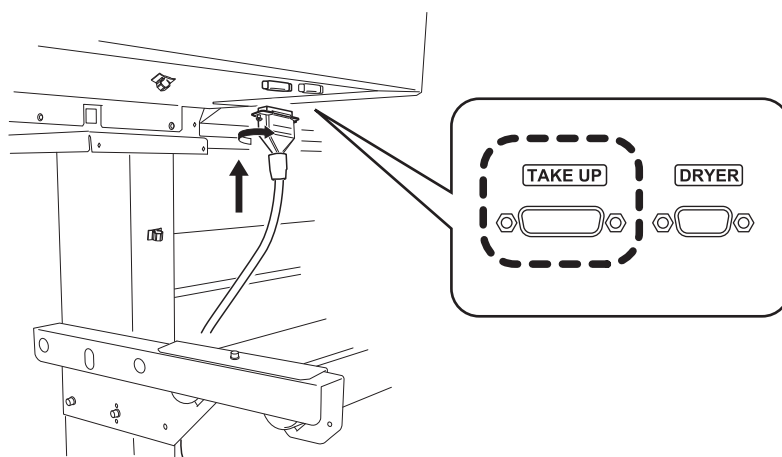

3. Secure the cable with five cable clamps.

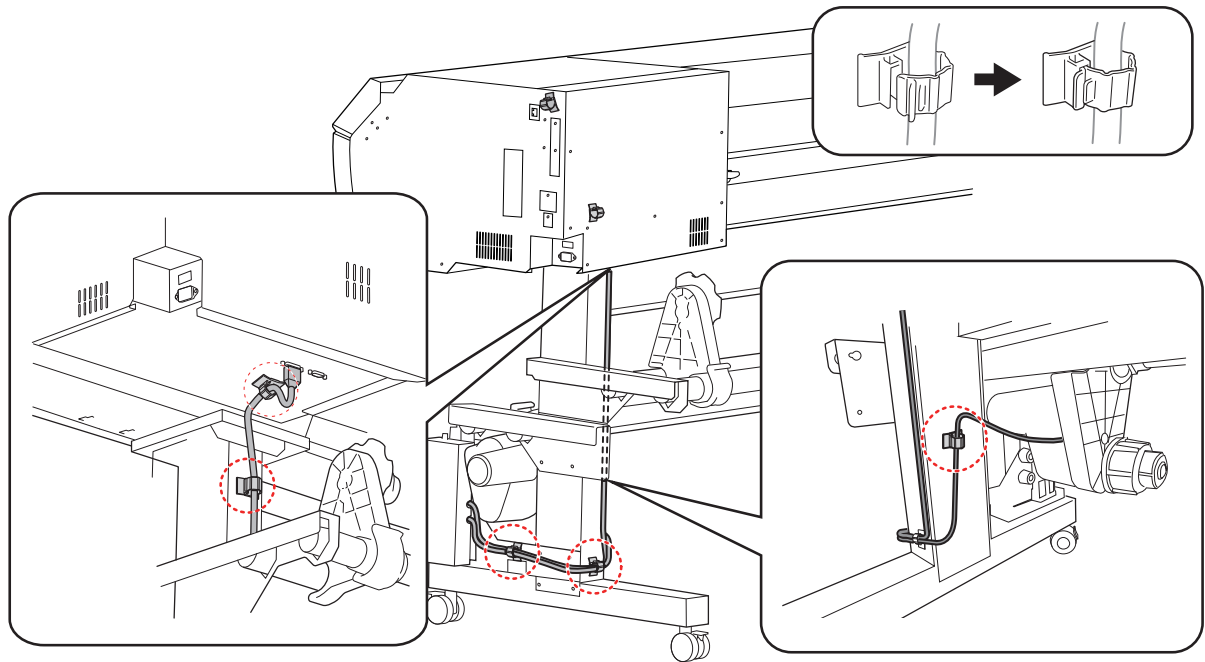


5. Install the dancer roller.

Procedure



1. Raise the dancer roller and place it on the stand legs.

MEMO

The dancer roller has no particular front and rear orientation.

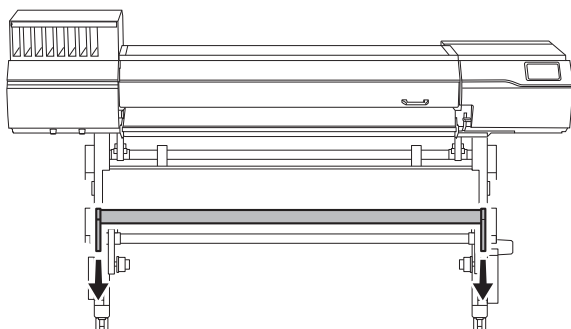



2. On the right side of the dancer roller, bring the flat surface of the shaft (A) toward you, and then temporarily tighten the bolt.

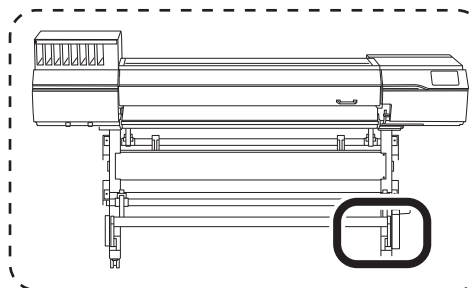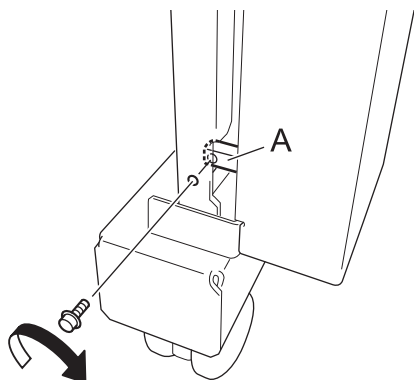


3. On the left side of the dancer roller, temporarily tighten the bolt.

MEMO

Both sides of the shaft are flat on the left side of the dancer roller.

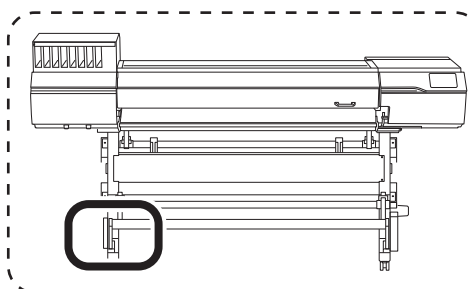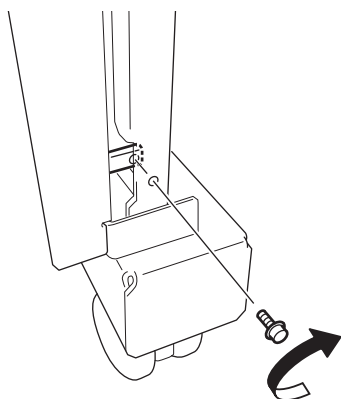


4. Fully tighten the bolt on the right side (A), followed by the left side (B) of the dancer roller.

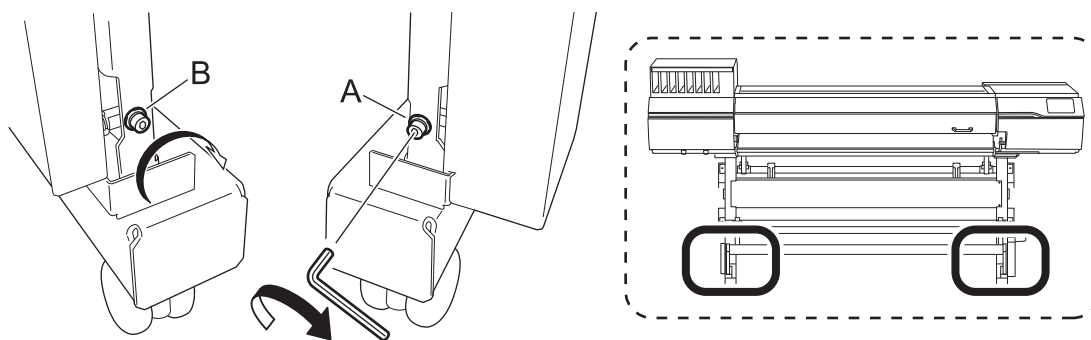


Step 5: Installing the Drain Bottle

Procedure


1. Insert the drain bottle stand into the grooves (①), and then slide it to the right (②).

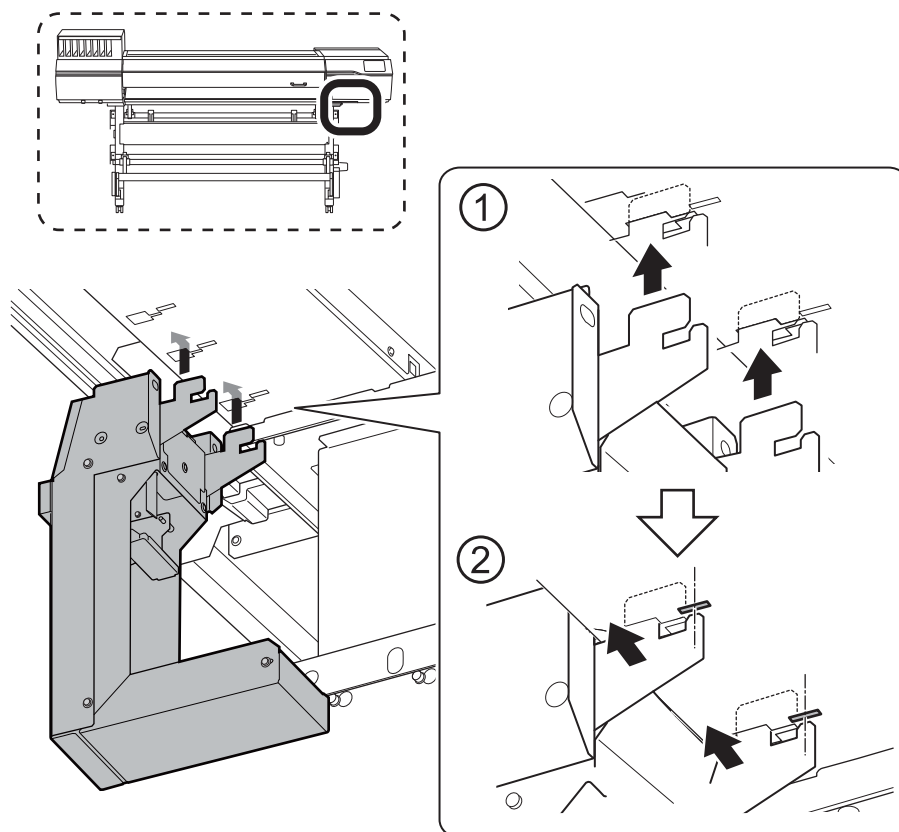


Insert the hooks (A) into the grooves (B), matching the status indicated in the figure.

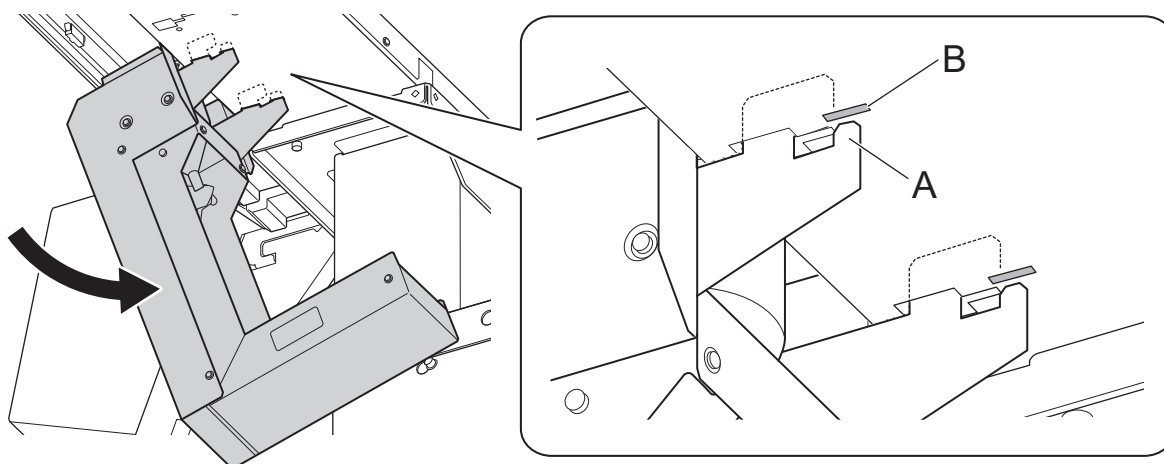


2. Connect the drain bottle stand connector to the unit.

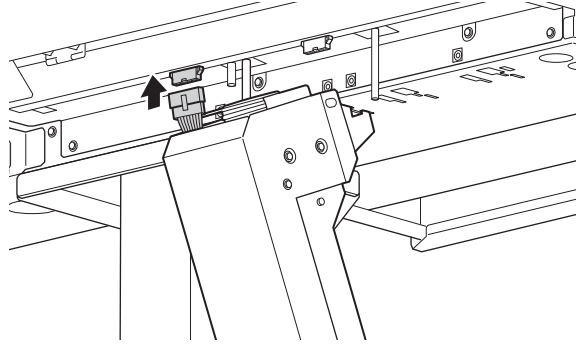


3. Stand up the drain bottle stand so it is vertical (①), and then slide it to the left (②).
Stand up the drain bottle stand until the hooks come completely free from the grooves.

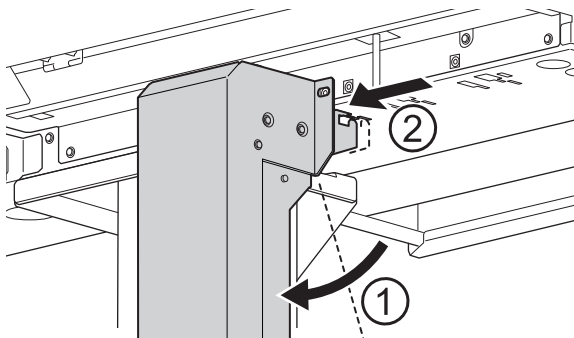

4. Fully tighten the two bolts to secure the drain bottle stand.

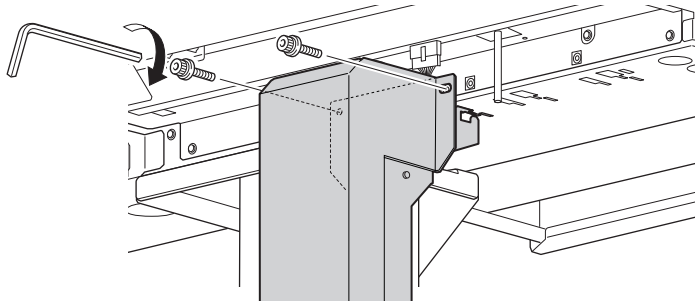

5. Install the drain bottle in the bottle stand.

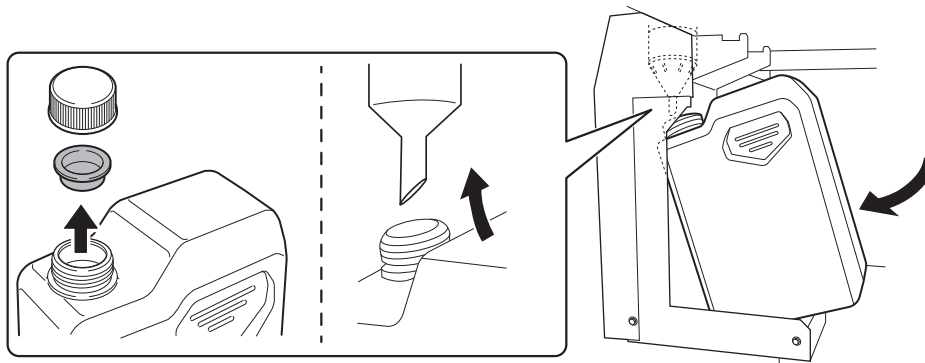


Step 6: Removing the Retainers

IMPORTANT

- Make sure to remove all the retainers. Any that remain may cause faulty operation or breakdown when the power is switched on.
- Store the retainers because they are needed again when transporting the machine.


Procedure

1. Open the front, left, and right covers.
2. Remove all the retainers.

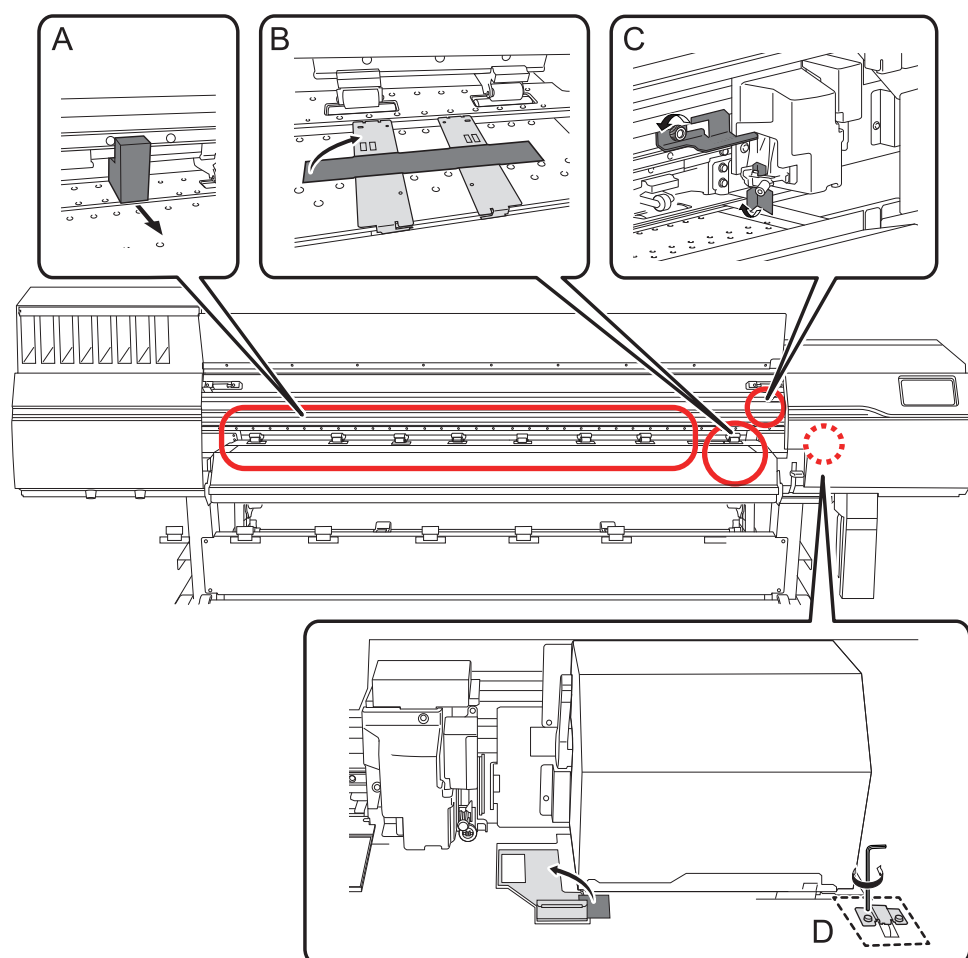


3. Install retainers C and D, which you have removed, at the positions indicated in the figure for storage. Use the bolt removed in step 2.

Retainer C

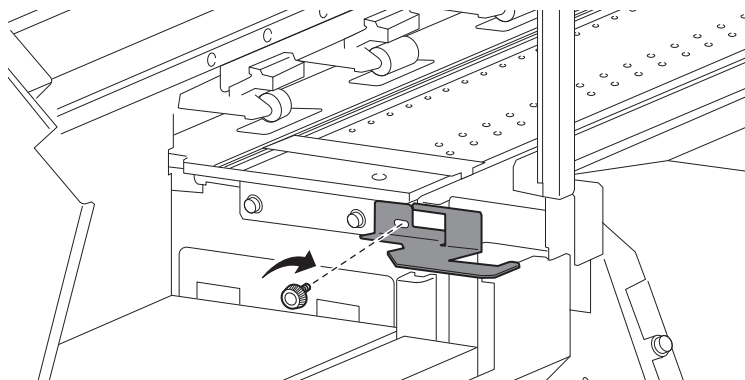

Retainer D

Rotate retainer D by 180° and install it at the position that hides the gear.

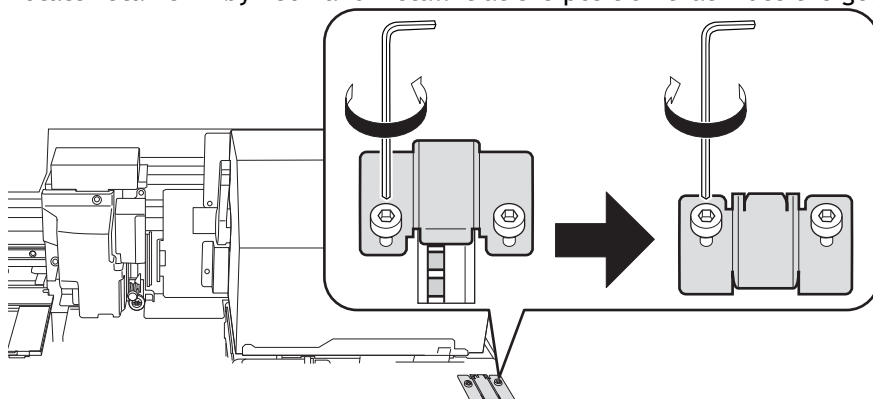

4. Close the front, left, and right covers.

Step 7: Adjusting the Ink Tube

Adjusting the Ink Tube

This work must be performed by a suitably qualified worker. Never attempt to perform this work yourself.

CAUTION


Leave this work to a suitably qualified worker.

This procedure includes work near sources of electrical danger and complex assembly work. Incorrect work may result in injury and mechanical malfunction.

Step 8: Affixing the Labels

Cartridge-slot labels are affixed to the platen at the location where the front cover opens.

Remove these labels from the platen, and then affix to the top of the cartridge slots the labels of the ink types to use. The following tables indicate the order of the ink cartridges.

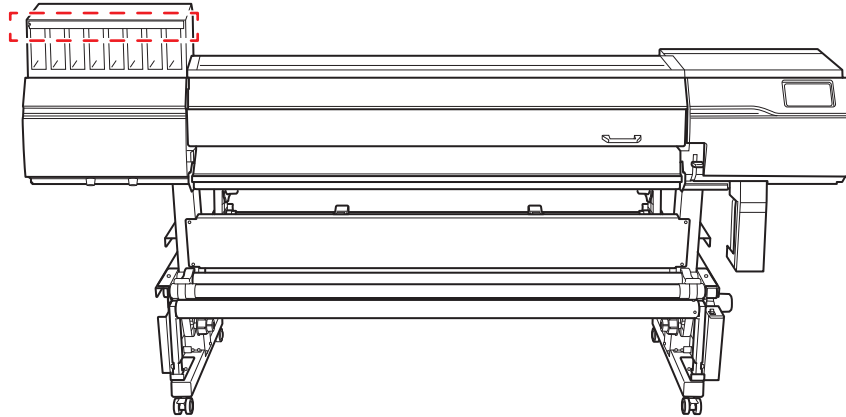

- CMYK
- CMYKWhWhOrGr

Slot number	1	2	3	4	5	6	7	8
CMYK	M	M	Y	Y	C	C	K	K
CMYKWhWhOrGr	M	Wh	Wh	Y	C	Or	Gr	K



- CMYKLcLmOrGr

Slot number	1	2	3	4	5	6	7	8
CMYKLcLmOrGr	M	Or	Gr	Y	C	Lm	Lc	K



Step 9: Connecting the Cables

WARNING

Perform this task with all power switches left switched off.
Otherwise sudden movement of the machine may cause injury.

WARNING

Connect to an electrical outlet that complies with this machine's ratings (for voltage, frequency, and current).
Incorrect voltage or insufficient current may cause fire or electrical shock.

WARNING

Handle the power cord, plug, and electrical outlet correctly and with care. Never use any article that is damaged.
Using a damaged article may result in fire or electrical shock.

WARNING

When using an extension cord or power strip, use one that adequately satisfies the machine's ratings (for voltage, frequency, and current).
Use of multiple electrical loads on a single electrical outlet or of a lengthy extension cord may cause fire.

Procedure

1. Connect both the power cord and the Ethernet cable (commercially available).

The recommended Ethernet and Ethernet cable are as follows.

- Ethernet: 1000BASE-T
- Ethernet cable: Category 5 or higher

Use a power plug connector if the electrical outlet is a two-prong outlet.


WARNING

Connect this machine to an electrical outlet. Never connect this machine directly to a power distribution panel or other such fixed wiring equipment.
Doing so increases the risk of fire or electrical shock.

WARNING

Connect to ground.
This can prevent fire or electrical shock due to current leakage in the event of malfunction.

2. Use clamps to secure the power cord and Ethernet cable.

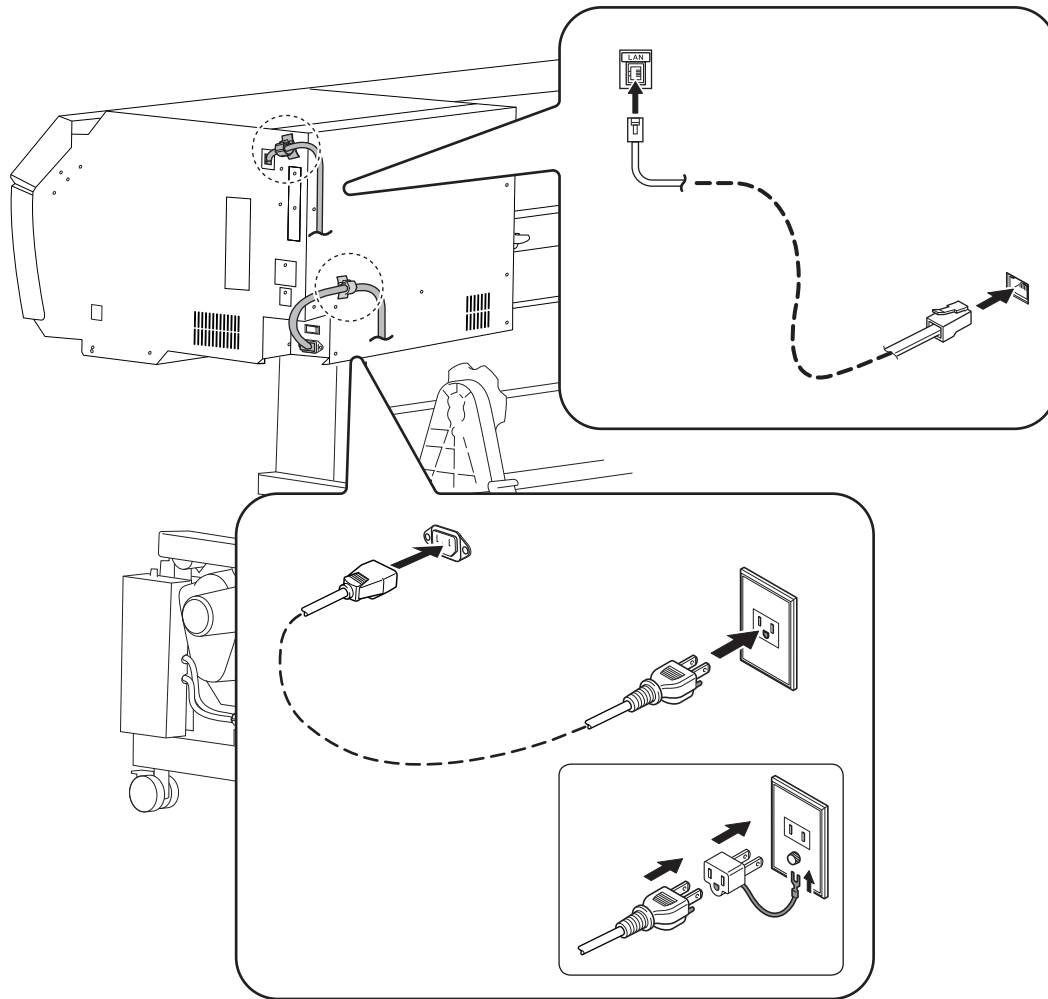

Step 10: Preparing the Cleaning Liquid


Prepare the cleaning liquid pouch, then set the pouch in cleaning cartridge.

IMPORTANT

- Be sure to use a new cleaning liquid pouch.
- Never, under any circumstances, use anything other than the specified type of cleaning liquid.
- The cleaning liquid pouch must be purchased separately. Contact your authorized dealer or visit our website (<https://www.rolanddg.com/>).
- Cleaning cartridges are consumable items. To purchase consumable items, contact your authorized Roland DG Corporation dealer or visit our website (<https://www.rolanddg.com/>).

Procedure

1. Remove the cover of the cleaning cartridge.
 - a. Keep the side with the arrow face up.
 - b. Remove the cover by sliding it in the direction indicated by the arrow.

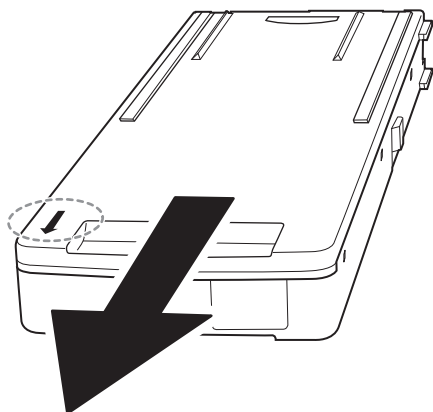


2. Set the cleaning liquid pouch into the cartridge case.

Install the cleaning liquid pouch into the cartridge case.


MEMO

To set the pouch in the correct position, pass the protrusions on the cartridge case through the holes in the pouch.

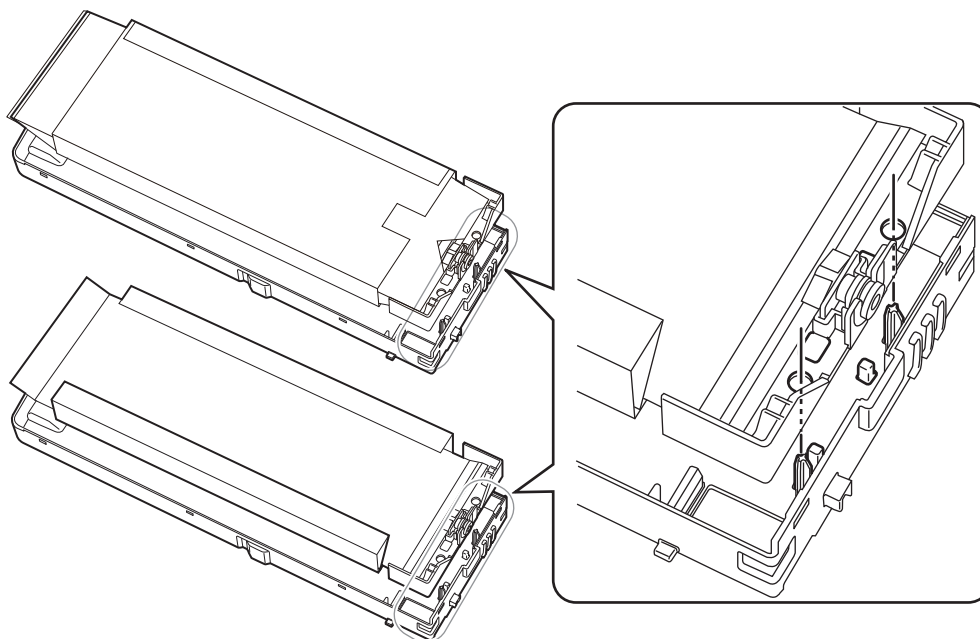


3. Attach the cover to the cartridge case.

- a. Insert the protrusions (A) at the back of the cover into the holes in the cartridge case.

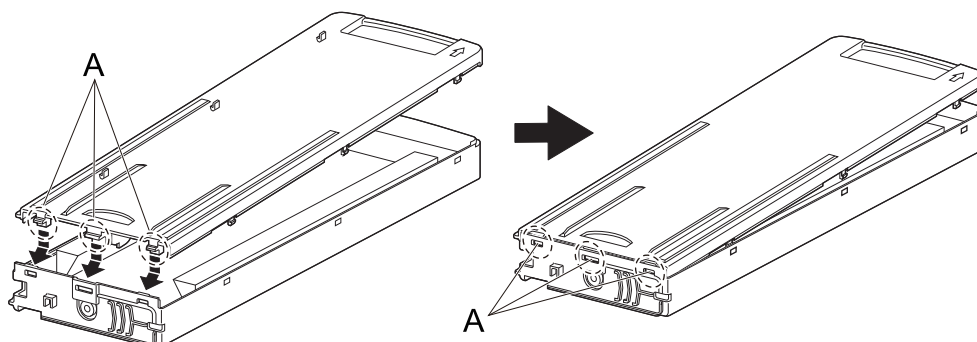

- b. Push the cover to fit its hooks into the holes in the cartridge case.

There are hooks in six locations. Check that all the hooks are seated in the holes and that the cover does not come loose from the cartridge case.

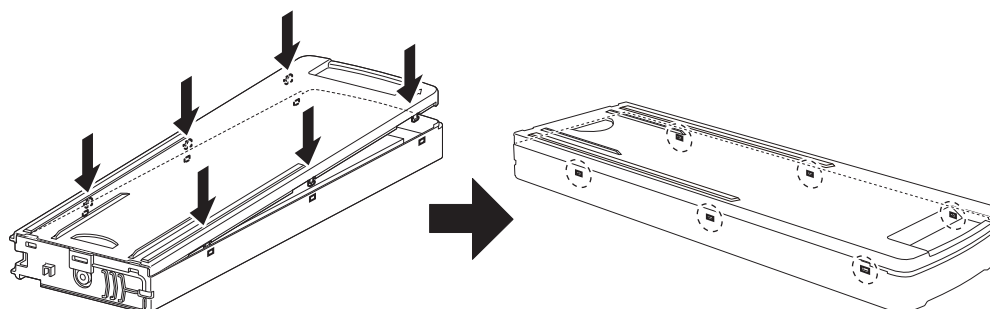


Step 11: Initial Settings and Ink Filling


1. Make the initial settings.

Procedure

1. Switch on the main power switch.

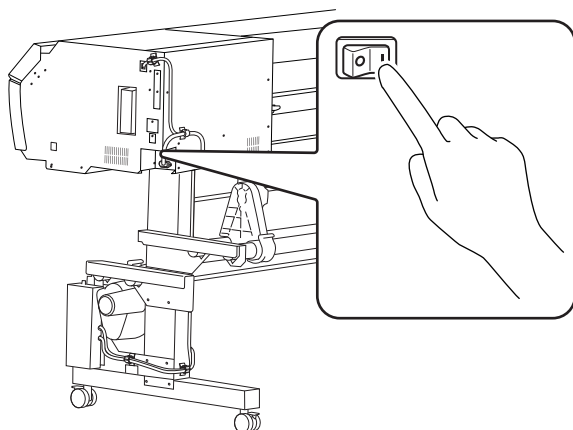

2. Tap the operation panel.
The [Tap to display the screen.] window appears.

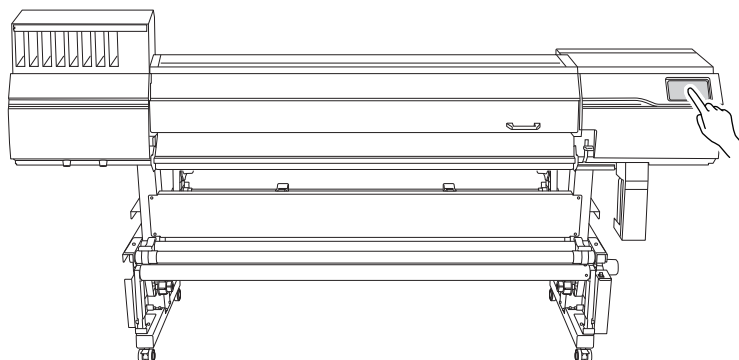

3. Tap the operation panel within 10 seconds of the [Tap to display the screen.] screen appearing.
The sub power turns on, and the [Language] screen appears.

4. Tap [English], and then select the language.

MEMO

Default setting: [English]

5. Tap [OK].
6. Tap [Save].
7. Tap [Length] and [Temperature] on the [Units] screen to set the units for each.

MEMO

Default settings

1. Assembly and Ink Filling

- [Length]: mm
- [Temperature]: °C


8. Tap [Save].

2. Installing the Cleaning Liquid and Selecting the Ink Type

Procedure

1. Set the cleaning cartridge in the cleaning liquid slot.

Orient the cartridge so its protrusion (①) is face up, and then, while keeping the cartridge level, insert the cartridge as far as it will go.

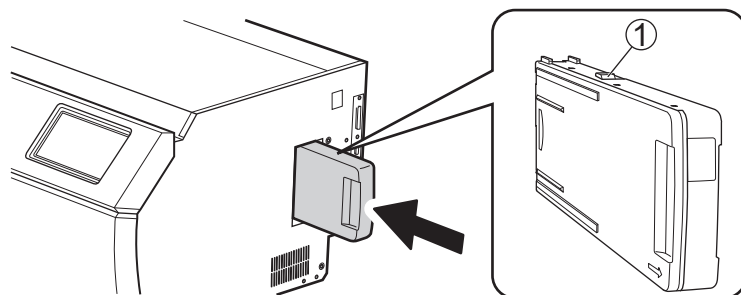

2. [Ink Type Not Set] screen will appear. Tap [TR3 CMYK].

This is set to [TR3 CMYK] by default. When using this ink type, tap [OK] and proceed to Step 4.

3. Select the ink type to use, and then tap [OK].

4. Tap [Execute].

MEMO

If an error occurs when the machine is filled with ink the second time or later, if the sub power is turned off to stop work, and in similar situations, the message [Discard the discharged fluid in the bottle.] will appear on the operation panel.

When this message appears, remove the drain bottle and discard the discharged fluid.

When the message [Discard the discharged fluid in the bottle.] appears on the operation panel

- (1) Remove the drain bottle and discard the discharged fluid.



CAUTION

Before you detach the drain bottle, be sure to wait for the screen to display [Discard the discharged fluid in the bottle.]. After discarding the discharged fluid, promptly attach the drain bottle to the machine.

Failing to follow this procedure may cause discharged fluid to flow out of the tube and spill, soiling your hands or the floor.

IMPORTANT

When you remove the drain bottle, a few drops of discharged fluid may come out of the machine. Exercise caution to prevent this fluid from soiling your hands or the floor.




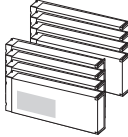
- (2) Quickly attach the emptied drain bottle to the machine once more.
- (3) Tap [Finish].

The [Manual Cleaning during Ink Filling] screen appears.

3. Perform manual cleaning.

⚠ WARNING


Be sure to perform operations as specified by the instructions, and never touch any area not specified in the instructions.
Sudden movement of the machine may cause injury.

Required items			
			
Cleaning sticks	Dropper	Cleaning liquid	Cleaning liquid cartridges (×8)


Procedure

1. Follow the procedure below to perform manual cleaning.

(1) Open the right cover.

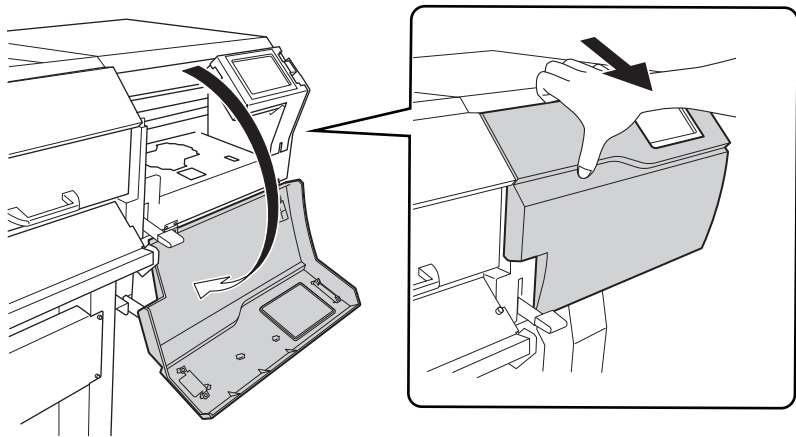

(2) Open the left cover.

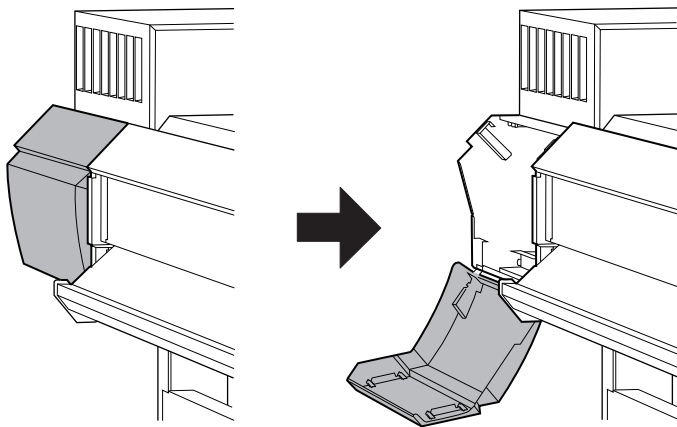


(3) Touch the location shown in the figure to discharge any static electricity.



(4) Moisten a new cleaning stick with the cleaning liquid.

MEMO


- Be sure to use one of the included cleaning sticks.
- Do not use a previously used cleaning stick.
- Do not put a previously used cleaning stick into the cleaning liquid.

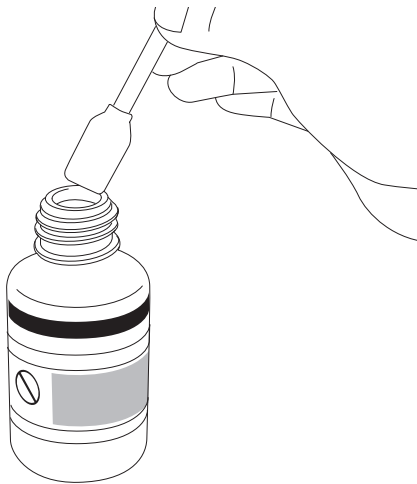


(5) Clean the locations shown in the following figure.

Be especially careful to clean away any fibrous dust (lint).

- (1): Wipe off wiper surfaces a and b with the cleaning stick.
- (2): Wipe off the area in the figure with a cleaning stick.
- (3): Use the wide surface of the cleaning stick, pressing the cleaning stick down while sliding between locations to clean up dirt.

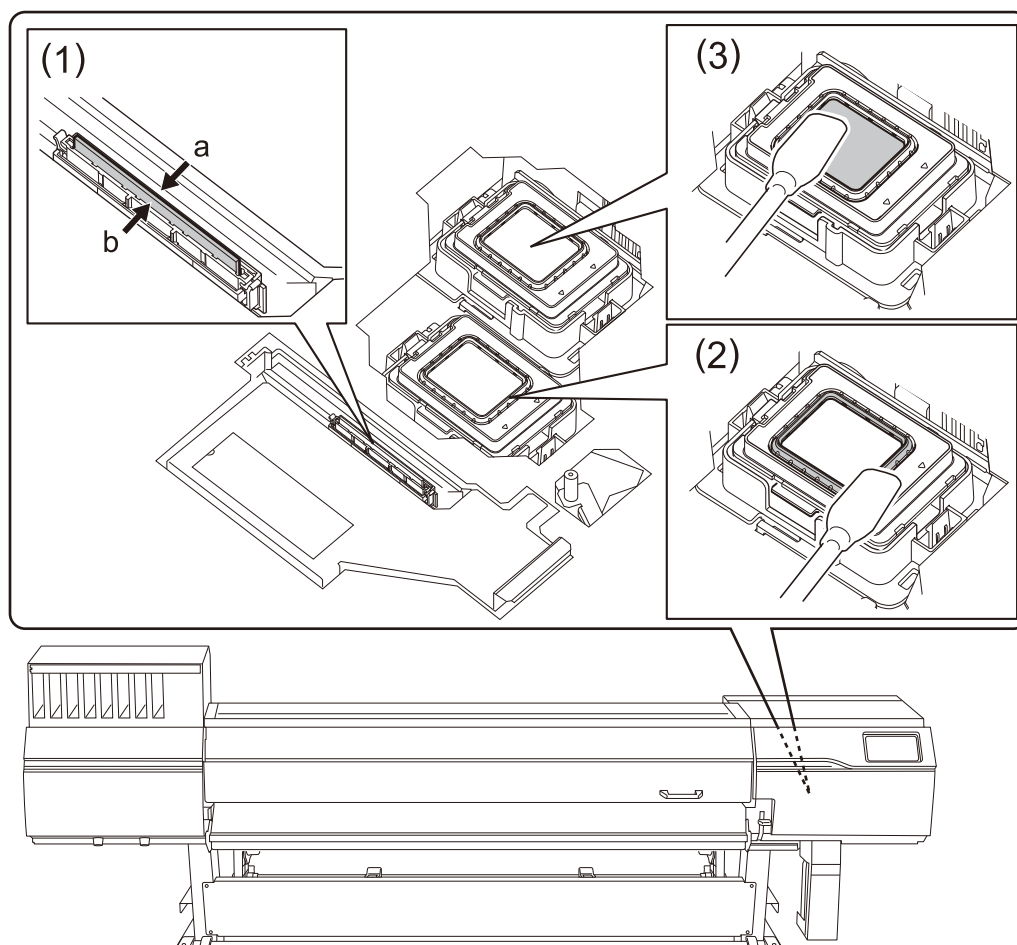

(6) Grasping the part indicated by ①, open the flushing cover.

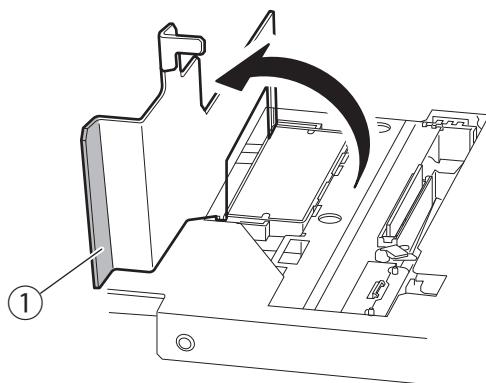

(7) Suction out some cleaning liquid with the dropper, and then drip this cleaning liquid in the location indicated in the following figure.

Use the included dropper.



Firmly squeezing the dropper and suctioning out the cleaning liquid (①) fills the dropper with enough cleaning liquid for one location.

Drip evenly onto the flushing sponge (②), moistening all parts equally.


IMPORTANT

- A low amount of cleaning liquid in this location may lead to poor printing quality.


- When dripping the cleaning liquid, ensure that the tip of the dropper does not come into contact with the locations.
If it does, wipe away any dirt from the tip of the dropper before the next time you suction out cleaning liquid.

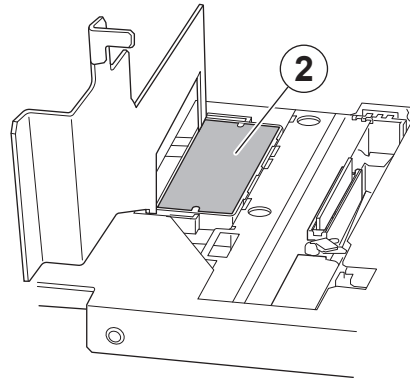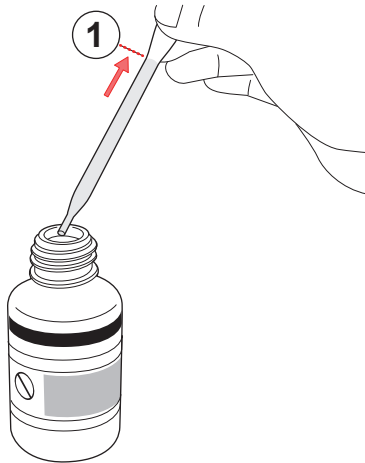

(8) Close the flushing cover.

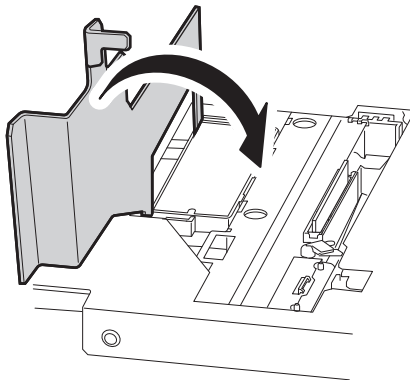

(9) Moisten a new cleaning stick with the cleaning liquid.

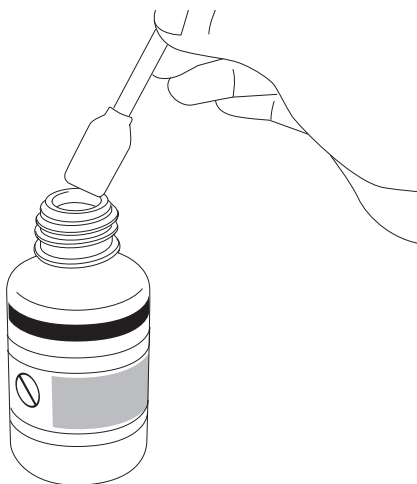


(10) Use the wide surface of the cleaning stick to wipe away any dirt from the locations shown in the following figure.

Be especially careful to clean away any fibrous dust (lint). Also wipe with the opposite, clean surface, ensuring that dirt from the dirty surface does not adhere to the head.


- Print heads

IMPORTANT

Push the cleaning stick into the grooves on the print head surface (①).

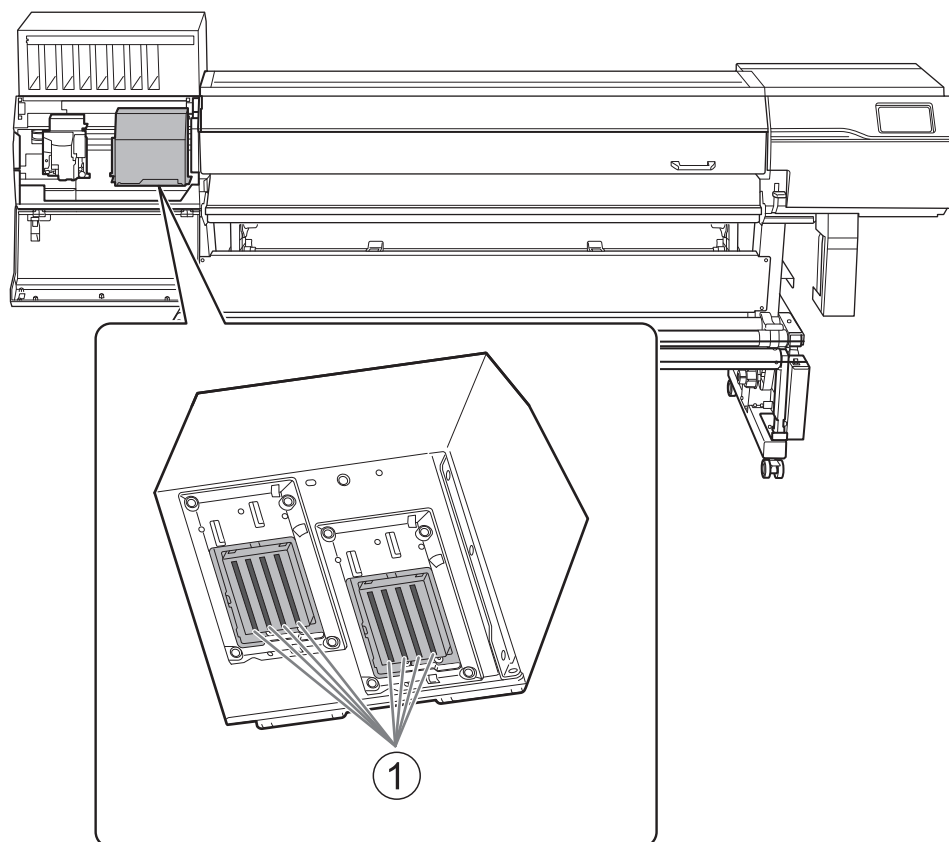


- Edges and sides of the print head (②)

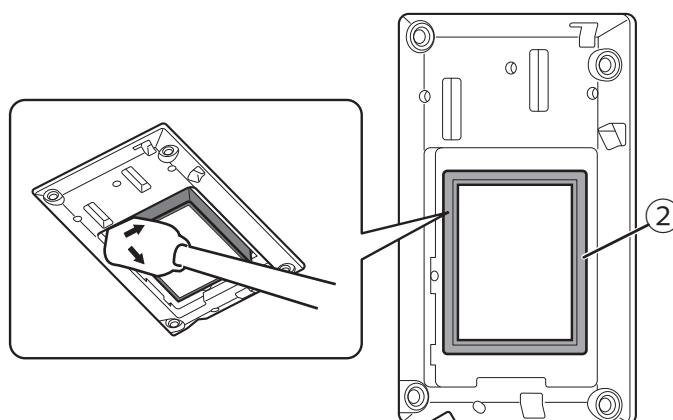

- Around print head

If this area has any ink or cleaning liquid that appears likely to drip, use a dry cloth that is not fluffy to gently wipe away the ink or cleaning liquid.

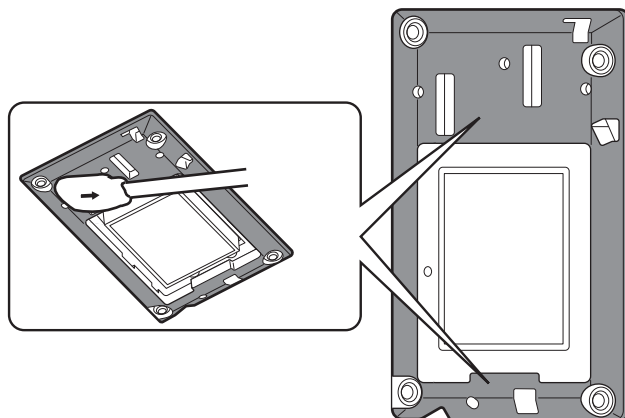

(11) Close the right and left covers, and then tap [Finish All].

After the print-head carriage returns to its original position, cleaning starts.

4. Fill the machine with ink.

IMPORTANT

Be sure to use new cleaning liquid cartridges and ink cartridges.

Procedure

1. When the [Install cleaning liquid cartridges in all the slots.] screen appears, insert cleaning liquid cartridges in all the slots.
When all the cartridges are inserted correctly, the [Head cleaning in progress. Please wait.] screen appears. The details of the operation in progress and the (approximate) remaining time of that work are displayed in the status bar at the top of the screen.
2. When the [Remove all the cartridges.] screen appears, remove all the cartridges.
When all the cartridges are removed, the [Head cleaning in progress. Please wait.] screen appears.
Repeat Steps 1 and 2 several times, then follow the instructions on the screen and proceed to the next step.
3. When the [Install cleaning liquid cartridge in slot No. *.] screen appears, insert a cleaning liquid cartridge in the specified number slot.
[*] displays a different slot number depending on the selected ink type.
When all the cartridges are inserted correctly, the [Head cleaning in progress. Please wait.] screen appears.
4. When the [Remove all the cartridges.] screen appears, remove all the cartridges.
When all the cartridges are removed, the [Head cleaning in progress. Please wait.] screen appears.
5. When the [Discard the discharged fluid in the bottle.] screen appears, carry out the following procedure.
 - (1) Remove the drain bottle and discard the discharged fluid.



⚠ CAUTION

Before you detach the drain bottle, be sure to wait for the screen to display [Discard the discharged fluid in the bottle.]. After discarding the discharged fluid, promptly attach the drain bottle to the machine.

Failing to follow this procedure may cause discharged fluid to flow out of the tube and spill, soiling your hands or the floor.

IMPORTANT


When you remove the drain bottle, a few drops of discharged fluid may come out of the machine. Exercise caution to prevent this fluid from soiling your hands or the floor.

- (2) Quickly attach the emptied drain bottle to the machine once more.
- (3) Tap [OK] when the [When output, cleaning, and other operations are completed, discard the] screen appears.
- (4) Tap [Finish].

6. When the [Install all the ink cartridges.] screen appears, insert ink cartridges in all the slots.

Before inserting ink cartridges, be sure to gently shake each of them.

The precipitation of the ingredients in the ink disables printing in normal color. Shake the ink cartridges so that the ink mixes well.

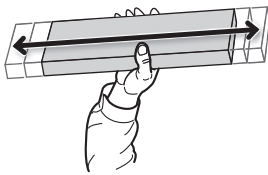


IMPORTANT

Ink labels indicating colors are affixed to the machine. Insert each ink cartridge into the slot whose label matches the color of the ink in the cartridge.

Inserting an incorrect cartridge may lead to breakdowns. Be careful not to insert the wrong cartridges.

If you insert an incorrect cartridge by mistake, contact your authorized dealer.

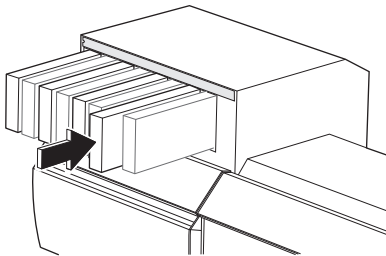

When all the cartridges are inserted correctly, the [Ink filling in progress. Please wait.] screen appears.

7. When the manual cleaning screen appears, perform manual cleaning again.

Perform the work under [3. Perform manual cleaning.\(P. 45\)](#) again.

8. Wait for ink filling to finish.

When the home screen appears, ink filling is finished.

2. Installing the Cutting Tool

This operation is unnecessary if you will not use the cutting tool. Tighten the cutting carriage screw lightly when no cutting tool is installed. Keeping the screw firmly tightened causes the cutting tool insertion hole to become gradually smaller, making installation difficult.

WARNING

Be sure to perform operations as specified by the instructions, and never touch any area not specified in the instructions.

Sudden movement of the machine may cause injury.

CAUTION

Never touch the tip of the knife.


Doing so may result in injury. The cutting performance of the blade will also be impaired.

Assembling the Cutting Tool

Procedure


1. Insert the pin.

Insert the pin until the tip protrudes about 3 to 5 mm (0.12 to 0.20 in.).

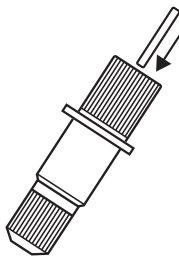


2. Insert the blade.


Insert the blade into the hole so the blade tip is on the outside.

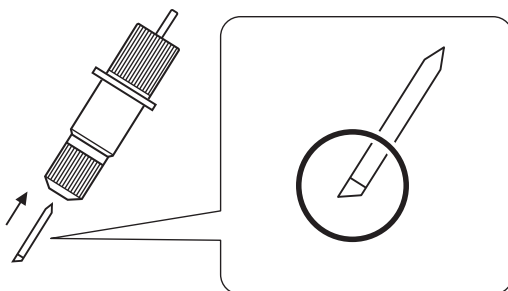


Installing the Cutting Tool

Procedure


1. Tap .
2. Tap [Maintenance]>[Blade Replacement].
3. Tap [Execute].
The cutting carriage moves to a position where the blade can be installed.
4. When [Open the front cover.] is displayed, open the front cover.
5. Loosen the cutting carriage screw in the order shown in the figure.

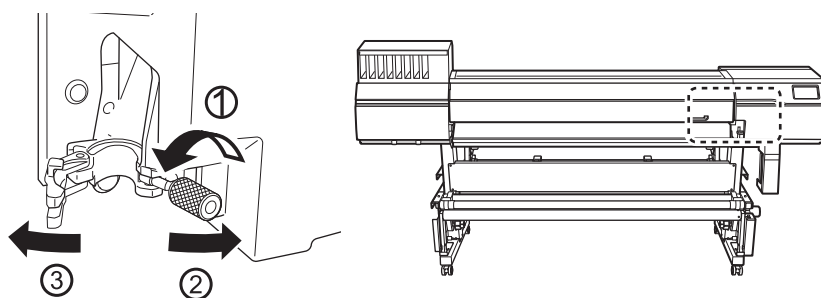

6. Install the cutting tool in the cutting carriage.

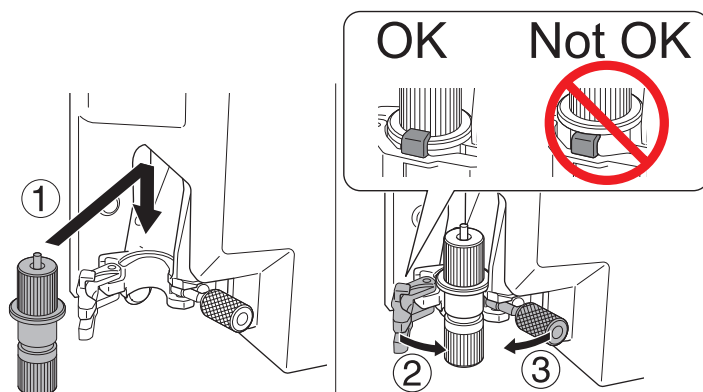

7. Tighten the screw.

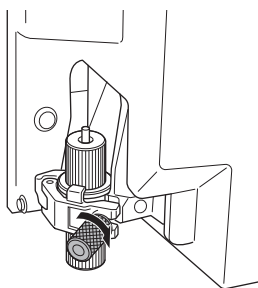


8. Close the front cover.

9. Tap [Finish All].

This completes the installation of the cutting tool.


3. Network Settings

The IP address of this machine can be assigned automatically from a DHCP server. If there is a DHCP server on your local network, no network settings are required. After connecting a LAN cable, carry out [4. Downloading and Installing Software\(P. 65\)](#) on the computer you are using.


However, it takes time to assign the IP address if there is no DHCP server. If the message [Connection is requiring too much time. Manually setting the IP address will] appears when you tap , carry out [Setting a Fixed IP Address\(P. 58\)](#).

IMPORTANT

Use Ethernet cables to connect the machine and the computer to the same LAN. If they are not connected to the same LAN, you will not be able to use connected services via Roland DG Connect.

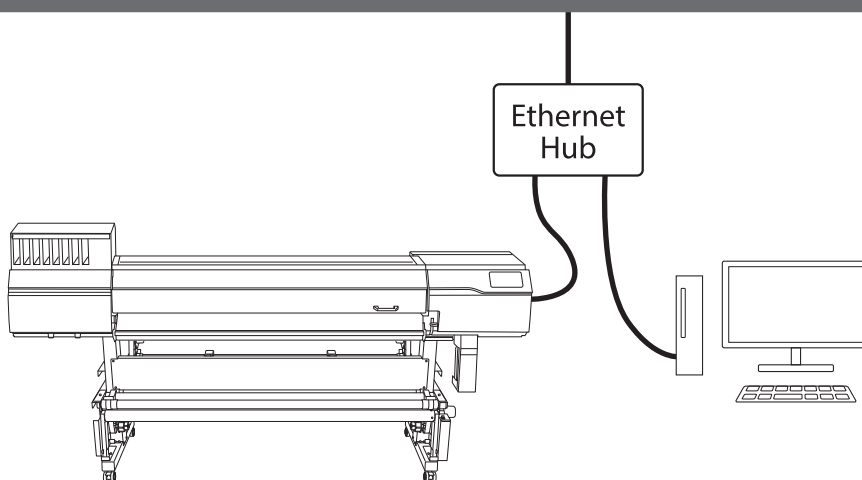

When connecting the computer and the machine directly, carry out [Directly Connecting to the Computer\(P. 60\)](#).

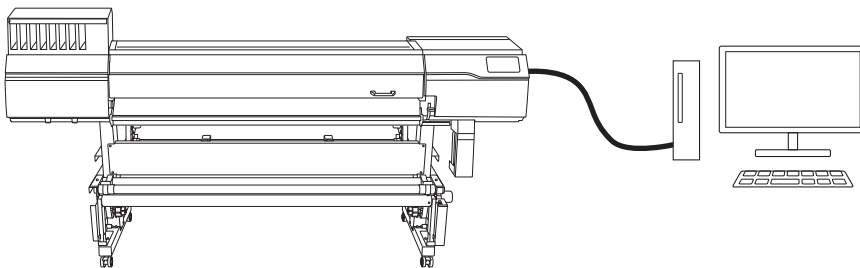

IMPORTANT



In an environment where the computer being used is connected to multiple network devices and the Internet, inappropriate settings will have a large effect on the entire network. For detailed information about the settings, consult your network administrator.


Introduction

This manual describes the Windows setting procedures. When using a Mac, refer to “For Mac Users.”


Setting a Fixed IP Address


Procedure

1. Tap .
2. Tap [System Information]>[Network].
3. Tap [Obtain IP Address Automatically] to set it to [Disable].
4. Tap  to the right of [IP Address].
The numeric value input screen appears.

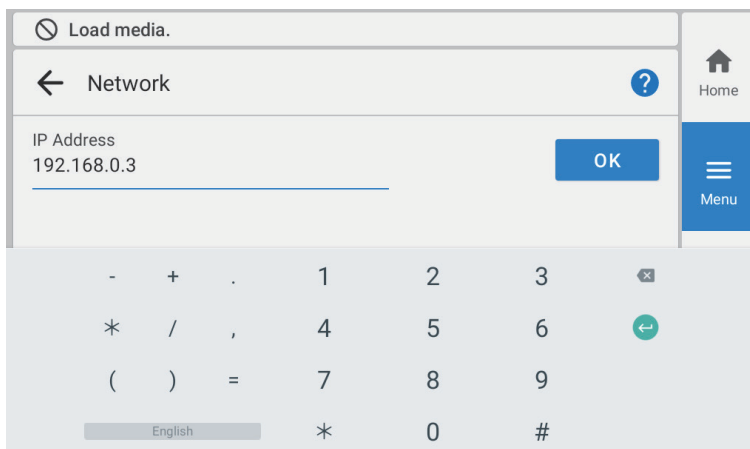

The screenshot shows the 'Network' settings screen. At the top, there is a 'Load media.' button with a circular arrow icon. Below it, the 'Network' title is displayed with a back arrow and a help icon. The 'IP Address' field is highlighted, showing the value '192.168.0.3'. To the right of the field is an 'OK' button. A numeric keypad is overlaid on the bottom half of the screen, featuring digits 0-9, symbols for minus, plus, multiply, divide, comma, equals, parentheses, and a backspace key. A 'Home' button is visible in the top right corner, and a 'Menu' button is in the bottom right corner.

5. Enter the IP address.
For the IP address, contact your network administrator.
6. Tap [OK].
7. Tap  to the right of [Subnet Mask].
The numeric value input screen appears.

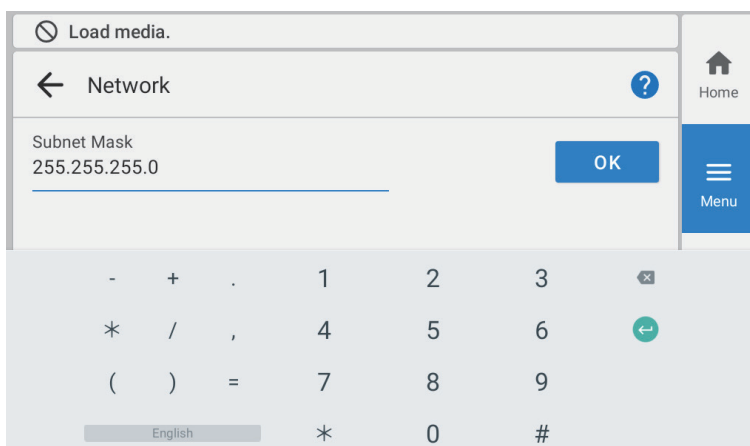



The screenshot shows the 'Network' settings screen. The 'Subnet Mask' field is highlighted, showing the value '255.255.255.0'. To the right of the field is an 'OK' button. A numeric keypad is overlaid on the bottom half of the screen, featuring digits 0-9, symbols for minus, plus, multiply, divide, comma, equals, parentheses, and a backspace key. A 'Home' button is visible in the top right corner, and a 'Menu' button is in the bottom right corner.

8. Enter the subnet mask.
9. Tap [OK].

10. Tap  to the right of [Default Gateway].

The numeric value input screen appears.

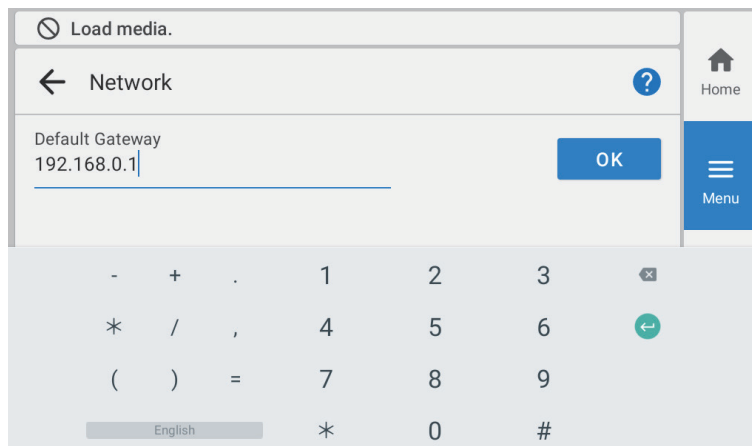


11. Enter the default gateway.
12. Tap [OK].
13. Tap [Save].
14. Tap  to go back to the original screen.

This completes the setting of a fixed IP address. Go back to the home screen. Then, proceed to 4. [Downloading and Installing Software\(P. 65\)](#).

Directly Connecting to the Computer

This section explains the setting procedure for connecting one computer and one machine directly, not over a network.


IP addresses that start with "192.168." can be used freely by anyone. Use one of these addresses when connecting one computer and one machine in an environment separate from other networks.

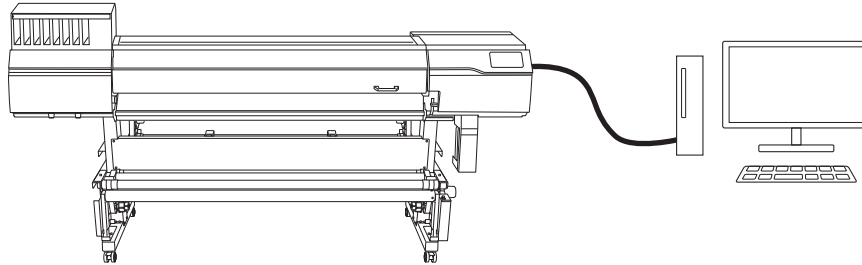

Step 1: Setting the Computer's Network


Procedure

1. Log on to Windows as the [Administrator] or a member of the [Administrators] group.
2. Display the network connections screen.
 - Windows 11
 - a. Click [Start]>[Settings].
 - b. Click [Network & Internet]>[Dial-up].
 - c. Click [Network and Sharing Center].
 - d. Click [Ethernet] or [Wi-Fi].
 - Windows 10
 - a. Click [Start]>[Settings]>[Network & Internet].
 - b. Click [Network and Sharing Center].
 - c. Click [Ethernet] or [Wi-Fi].
3. Click [Properties].
If a [User Account Control] window appears, click [Continue].

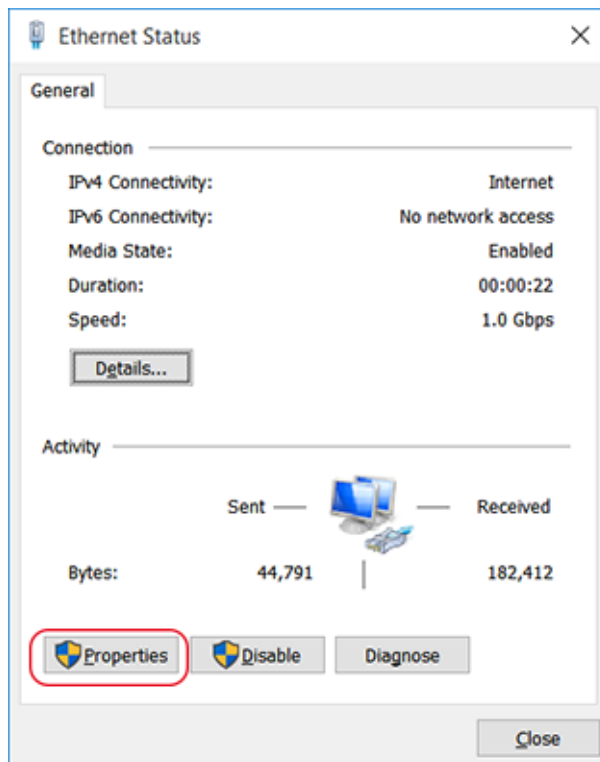

The [Ethernet Properties] or [Wi-Fi Properties] window appears.

4. Select [Internet Protocol Version 4 (TCP/IPv4)], and then click [Properties].
If the [Internet Protocol] check box is clear, select it.

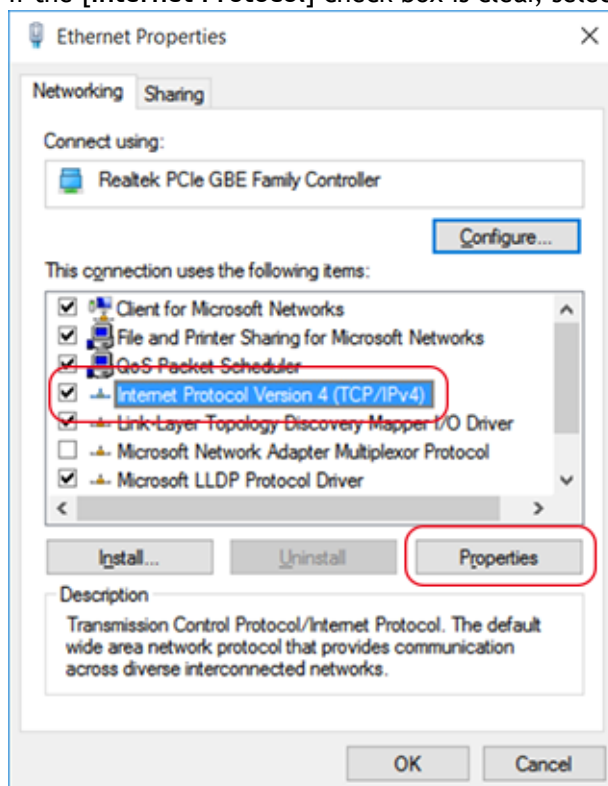


5. Select [Use the following IP address]. Enter the information as shown below, and then click [OK].

3. Network Settings

Item	Address to enter
IP address	192.168.0.XXX
Subnet mask	255.255.255.0

Here, "XXX" can be any number from 1 to 254. Ensure that it is different from the numbers of other equipment.

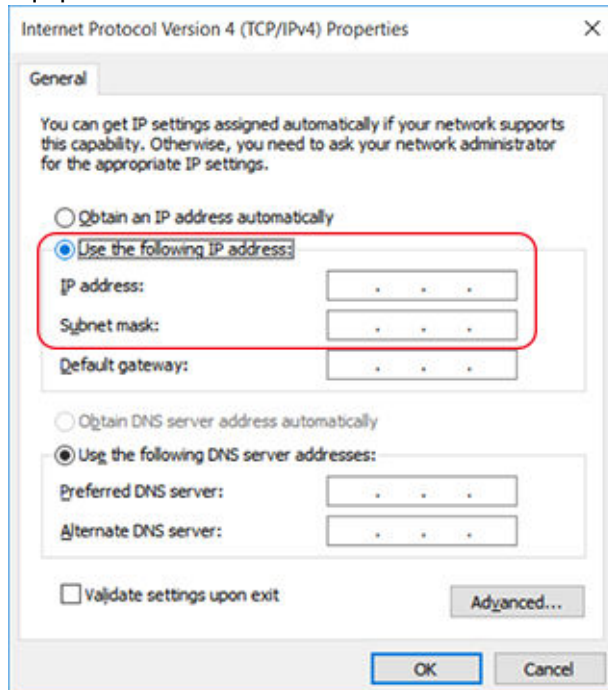



6. Click the following buttons to return to the original state.
 - a. [OK] in the [Internet Protocol Version 4 (TCP/IPv4) Properties] window
 - b. [Close] in the [Ethernet Properties] or [Wi-Fi Properties] window
 - c. [Close] in the [Ethernet Status] or [Wi-Fi Status] window

Step 2: Make the Network Settings on the Printer

Procedure


1. Set the IP address.

- (1) Tap .
- (2) Tap [System Information]>[Network].
- (3) Tap [Obtain IP Address Automatically] to turn it off.
- (4) Tap  next to [IP Address].
- (5) Set the IP address (192.168.0.XXX).

"XXX" represents a number from 1 to 254. However, be sure to specify a number that is different from the setting you made in Step 1 and from the numbers used for other computers and devices.

For the part corresponding to [192.168.0], apply the same value as the setting of your computer.


Here, [192.168.0.3] is entered by way of example.

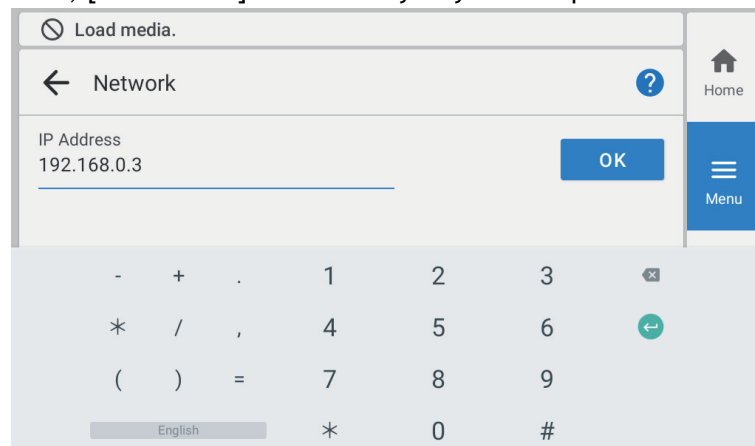


The screenshot shows the 'Network' settings screen. At the top, there is a 'Load media.' toggle. Below it, the 'Network' title is displayed with a back arrow and a help icon. The 'IP Address' field is set to '192.168.0.3' and has an 'OK' button next to it. A numeric keypad is visible at the bottom, with digits 0-9, operators (+, -, *, /), and symbols (#, *). The keypad also includes a 'Back' arrow and a 'Clear' (X) button. The language is set to 'English'.

- (6) Tap [OK].

2. Set the subnet mask.

- (1) Tap  next to [Subnet Mask].
- (2) Set the subnet mask (255.255.255.0).

For the subnet mask, make the setting the same value as the one used by the computer.

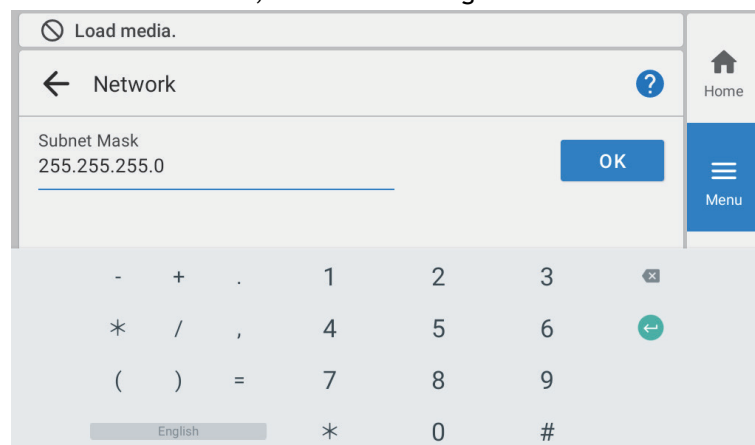

The screenshot shows the 'Network' settings screen. At the top, there is a 'Load media.' toggle. Below it, the 'Network' title is displayed with a back arrow and a help icon. The 'Subnet Mask' field is set to '255.255.255.0' and has an 'OK' button next to it. A numeric keypad is visible at the bottom, with digits 0-9, operators (+, -, *, /), and symbols (#, *). The keypad also includes a 'Back' arrow and a 'Clear' (X) button. The language is set to 'English'.

- (3) Tap [OK].

3. Network Settings


- (4) Tap [Save].

If you are using the computer and the machine on a one-to-one basis, this completes the settings to make on the printer.

Go back to the original screen. Then, proceed to [4. Downloading and Installing Software\(P. 65\)](#).


If you need to set the gateway address, proceed to the following procedure.

3. Set the gateway address.

- (1) Tap  next to [Default Gateway].

- (2) Set the default gateway (192.168.0.XXX).

For the value to enter for your default gateway, contact your network administrator. Here, [192.168.0.1] is entered by way of example.

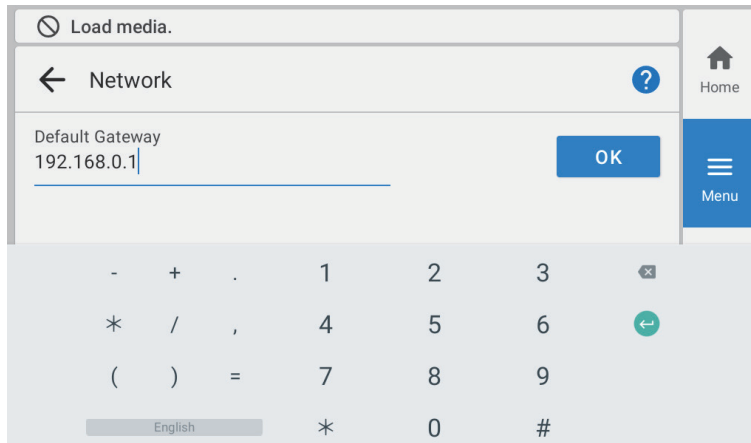

The screenshot shows a mobile interface for network settings. At the top, there is a 'Load media.' button. Below it is a 'Network' header with a back arrow and a help icon. The main section is titled 'Default Gateway' and contains a text field with the value '192.168.0.1' and an 'OK' button. A numeric keypad is overlaid on the bottom half of the screen, featuring standard numeric keys (0-9), arithmetic operators (+, -, *, /), and symbols like parentheses, equals, comma, and hash. A green arrow button is also present on the keypad. On the right side of the screen, there are 'Home' and 'Menu' navigation options.

- (3) Tap [OK].

- (4) Tap [Save].

4. Tap to go back to the original screen.

4. Downloading and Installing Software

IMPORTANT

A connection to the Internet is required to download and install the software.

Among the various pieces of software to use with this machine, first download and install Roland DG Connect Hub on the computer to connect to the machine. Then, install the other required software.

Downloading Roland DG Connect Hub

Procedure

1. Start the computer and log on as the "Administrator" or an "Administrators" account.
Shut down all other programs.
2. Access the following website on the computer where the software will be downloaded.
<https://downloadcenter.rolanddg.com/XG-640#software>

MEMO

Depending on where you live, you may be asked to complete user registration before downloading the software.

3. Click [Roland DG Connect / Connect Hub].
4. Click [Installer/Updater[20**-**-**]].
The explanation window for Roland DG Connect appears.
5. Click [Go to Download].
6. Read the license agreement for the software. If you agree with the contents, click [Agree].
7. Download [RolandDG_Connect_Setup.zip] to an arbitrary location.

Installing the Software

IMPORTANT

A setup video for Roland DG Connect Hub is available in the explanation window for Roland DG Connect that you opened in step 4 of [Downloading Roland DG Connect Hub\(P. 65\)](#). We recommend that you view this video to understand the overall flow of work.

https://downloadcenter.rolanddg.com/contents/software_parts/connect_info_en.html

1. Install Roland DG Connect Hub.

Procedure


1. Extract the files from [RolandDG_Connect_Setup.zip], the file you downloaded, to the desired location.
2. Double-click [RolandDG_Connect_Setup.exe] in the extracted folder.
When the [User Account Control] window appears, click [Allow] or [Yes].
3. Select the language to use from the pull-down list, and then click [OK].
4. Follow the on-screen instructions to install Roland DG Connect Hub.

2. Install the required software from Roland DG Connect Hub.

Use Roland DG Connect Hub to install the related software. After the software is installed, you can perform operations such as starting and updating the software from Roland DG Connect Hub.

Procedure


1. From the Windows Start menu, click [Roland DG Corporation]>[Roland DG Connect Hub].
2. Refer to the Initial_Setting_Guide in the folder extracted from [RolandDG_Connect_Setup.zip] to perform the following operations.
 - (1) Create a Roland DG Connect ID.
If you already have an ID, proceed to the next step.
 - (2) Configure the Connect Hub settings.
3. On the main screen, click the machine to use.
The software that can be used with the selected machine is displayed at the bottom of the screen.

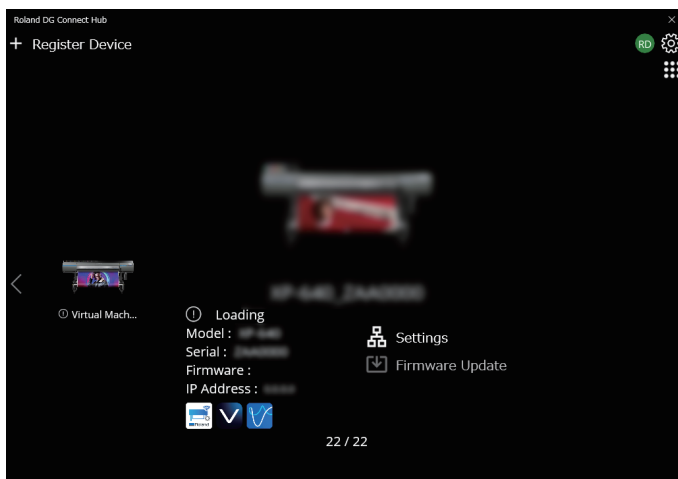

4. Install all the software displayed at the bottom of the screen.

MEMO

When the installation is finished, click the Close button ("X") in the upper-right corner of the main screen to minimize Roland DG Connect Hub to the notification area. Although Roland DG Connect Hub is no longer displayed, it is still running. The icon of Roland DG Connect Hub is displayed at all times in the notification area while this software is running.

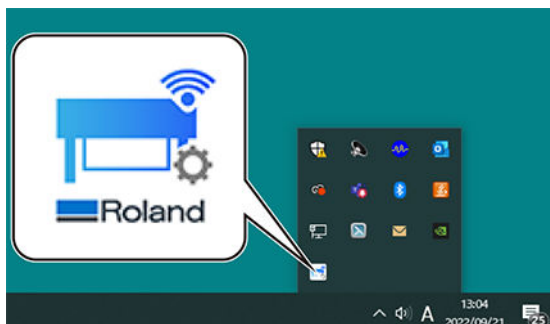

Configuring the Software RIP Settings


For information on how to connect the printer after installing VersaWorks, see the [VersaWorks Installation Guide](#).

Appendix

Location of the Power Rating and Serial Number Label 70

Location of the Power Rating and Serial Number Label

Right Side

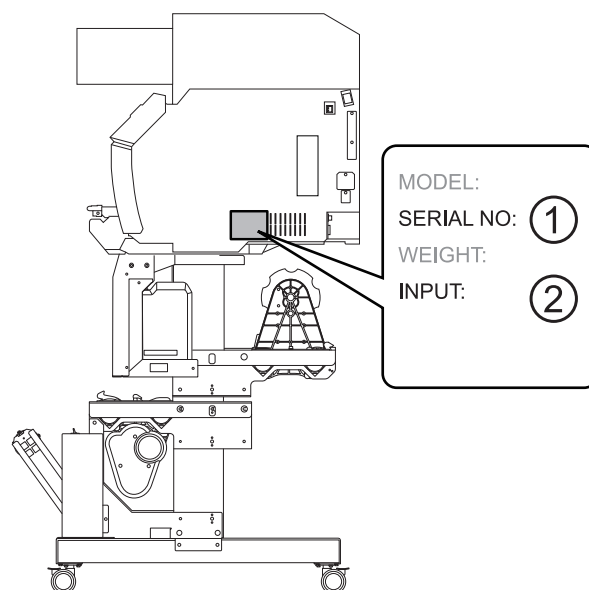

①	Serial number This number is required when you seek maintenance, servicing, or support. Never peel off the label.
②	Power rating Use an electrical outlet that meets the requirements for voltage, frequency, and amperage given here.

